


INSTALLATION INSTRUCTIONS
CHEVROLET SILVERADO 2500HD/3500HD '07-'10
(Gas & Diesel - 2/4WD)

| Parts list: | | | | | | Required Tools (no included) | |
|-------------|----------|------------------|----------------------------------|-------------|-----------------------|------------------------------|--|
| ITEM | QTY. | CODE | DESCRIPTION | TORQUE MAX. | DESCRIPTION | QTY. | |
| 1 | 1 | 573790AC | Grille Guard | - | 9/16" Socket / Wrench | 1 | |
| | 1 | BRK-57379 | Brackets kit includes: | - | 3/4" Socket / Wrench | 1 | |
| 2 | 1 | 573794BA | Lower bracket set | - | 18mm Socket / Wrench | 1 | |
| 3 | 2 | 573792AA | AA Upper bracket | - | 15mm Socket / Wrench | 1 | |
| 4 | 2 | 573792BA | BA Upper bracket | - | Extension | 1 | |
| | 1 | KTE-57379 | Hardware kit includes: | | Ratchet | 1 | |
| 5 | 4 | - | 1/2 x 1 1/4" Hex. Head bolt Z.B. | 70 Lb.Ft | Flat screw driver | 1 | |
| 6 | 8 | - | 1/2" Flat washer Z.B. | - | Cutter | 1 | |
| 7 | 6 | - | 1/2" Lock nut Z.B. | 70 Lb.Ft | | | |
| 8 | 2 | - | 1/2 x 1 1/2" Hex. Head bolt Z.P. | 70 Lb.Ft | | | |
| 9 | 4 | - | 1/2" Flat washer Z.P. | - | | | |
| 10 | 2 | - | 1/2" Lock washer Z.P. | | | | |
| 11 | 2 | - | 1/2" Hex. Nut Z.P. | 70 Lb.Ft | | | |
| 12 | 2 | - | 1/2 x 1 1/2" Hex. Head bolt Z.B. | 70 Lb.Ft | | | |

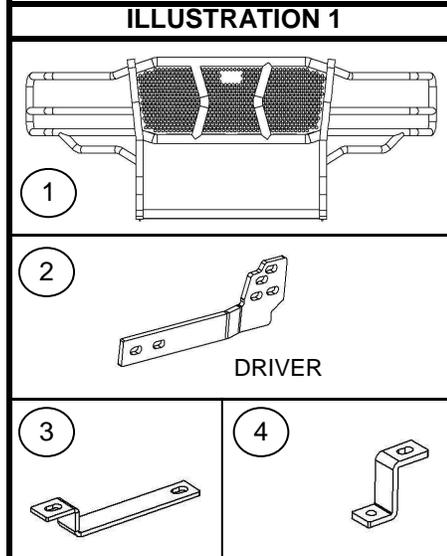


Instructions: **Approximated installation time: 40 min.**


1. Carefully read and understand instructions before start installation. If You can not find all the listed parts, please stop installation. Stop installation and call to your dealer to get the missing pieces.

Assembly diagram:

2. Remove the plastic cover over the radiator, taking off the plastic ribbets using a flat screw driver. (**Img. 1**).

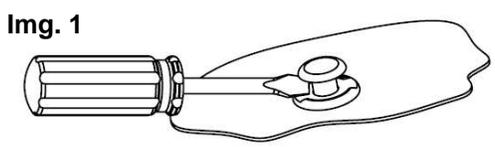


3. In order to install correctly the lower bracket, it is necessary to cut the fascia in both sides. (**Img. 2**).

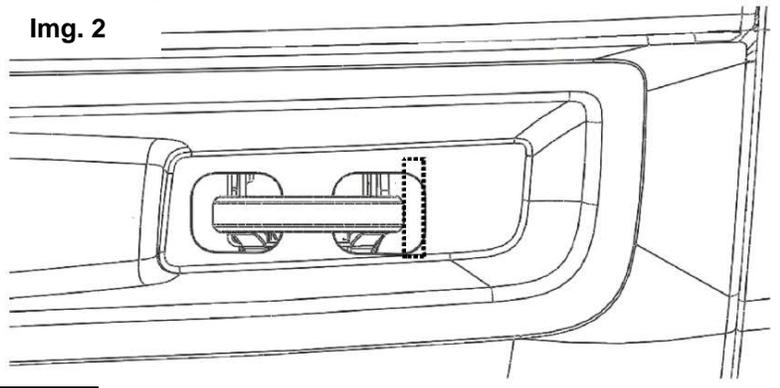

Cleaning and care instructions:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.

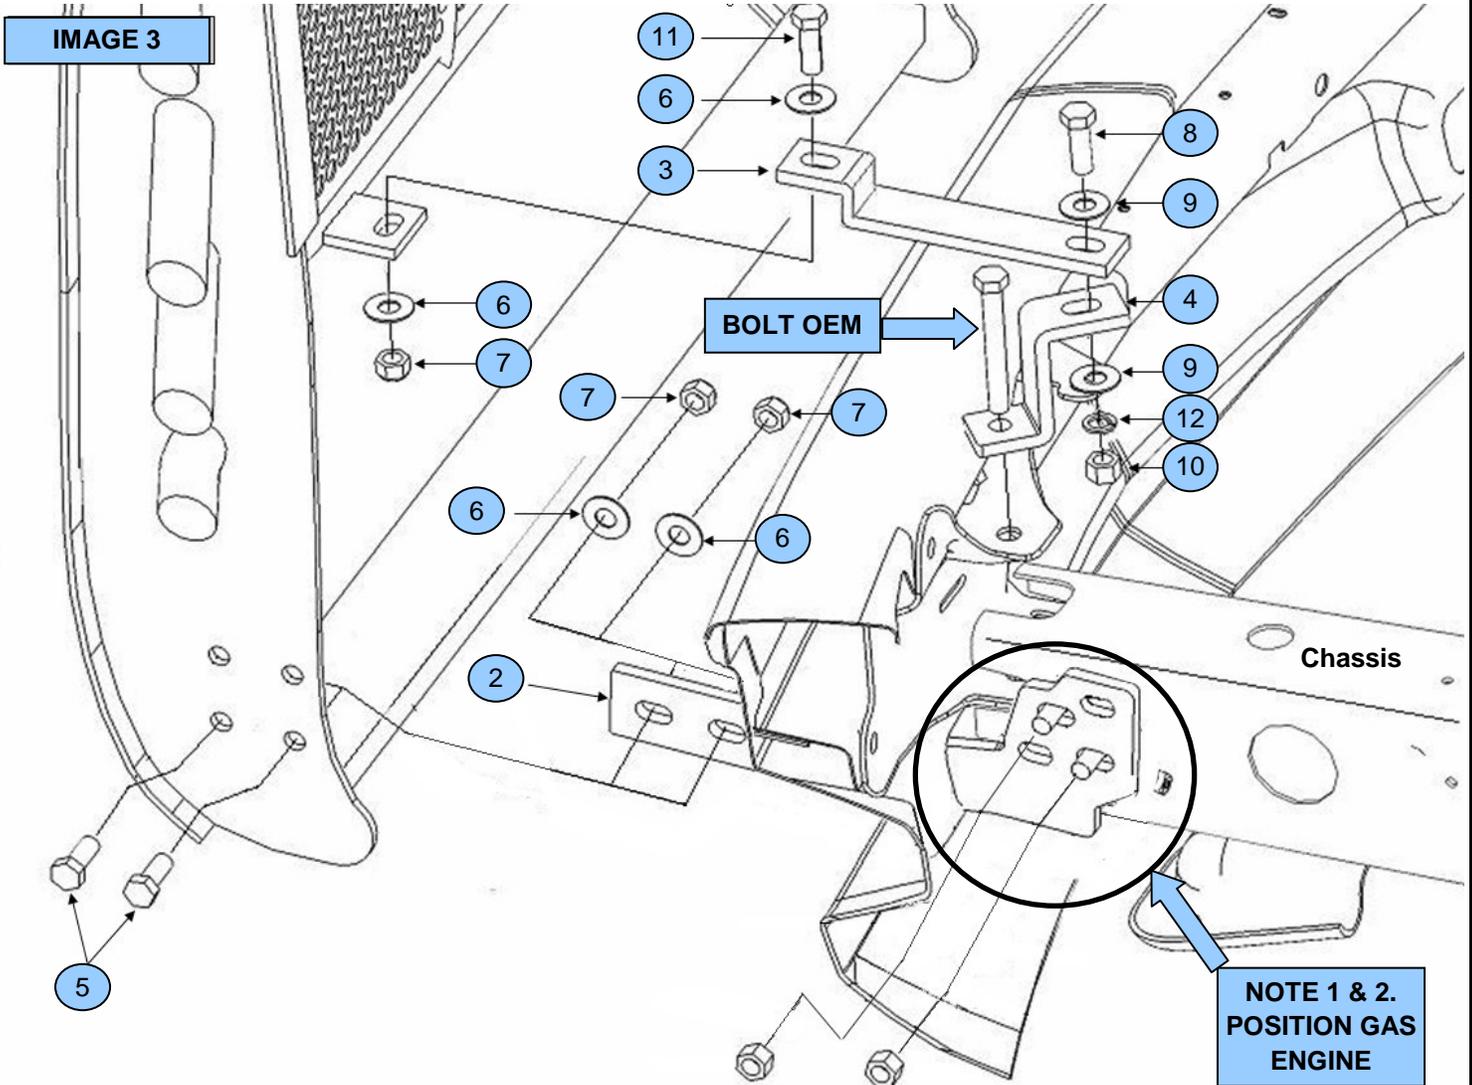

Note 1. Use the existent bolts to fix the bracket, if the vehicle doesn't have tow hooks, use the 1/2 x 1 1/2" bolts in the hardware kit.

Note 2. On the driver side it will be necessary to change the orientation of the bolt, so the tips look as shown in (**Image 3** and **picture 1**).

4. Align your accessory and reinstall the plastic cover of the radiator.

5. Do not use abrasive substances to clean your product.

6. Fill out your warranty card and place it inside your vehicle.

PICTURE 1.



PICTURE 1. Shows the position in diesel engine

Cleaning and care instructions:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.