

# GO RHINO!

## PRODUCTS®

### INSTALLATION INSTRUCTIONS

RHINO! CHARGER PART NUMBER 5565 (B-PS)  
2010 DODGE RAM 2500HD, 3500HD P/U 2/4WD

Do not attempt to install this product on any vehicle other than the one it is designed for and listed above!

### PACKING LIST

<u>QTY</u>	<u>PART DESCRIPTION</u>	<u>QTY</u>	<u>PAR PART DESCRIPTION</u>
4	3/8" X 1" HEX BOLT	8	3/8" HEX NUT
4	3/8" X 2" HEX BOLT	1	DRIVER SIDE BRACKET
12	3/8" FLAT WASHER	1	PASSENGER SIDE BRACKET
8	3/8" LOCK WASHER	1	5565 RHINO CHARGER BAR



### INSTALLATION INSTRUCTIONS

**READ THE INSTRUCTIONS COMPLETELY BEFORE YOU BEGIN THE INSTALLATION**

**STEP-1** BEGINNING WITH THE DRIVER SIDE, LOCATE THE HOLES IN THE FRAME. **PHOTO #1**

**STEP-2** POSITION THE DRIVER SIDE BRACKET AS SHOWN AND ATTACH THE BRACKET TO THE FRAME USING (2) 3/8" X 2" HEX BOLTS, (4) FLAT WASHERS, LOCK WASHERS AND HEX NUTS. DO NOT TIGHTEN. **PHOTO #2**

REPEAT THE STEPS TO INSTALL THE PASSENGER SIDE BRACKET.

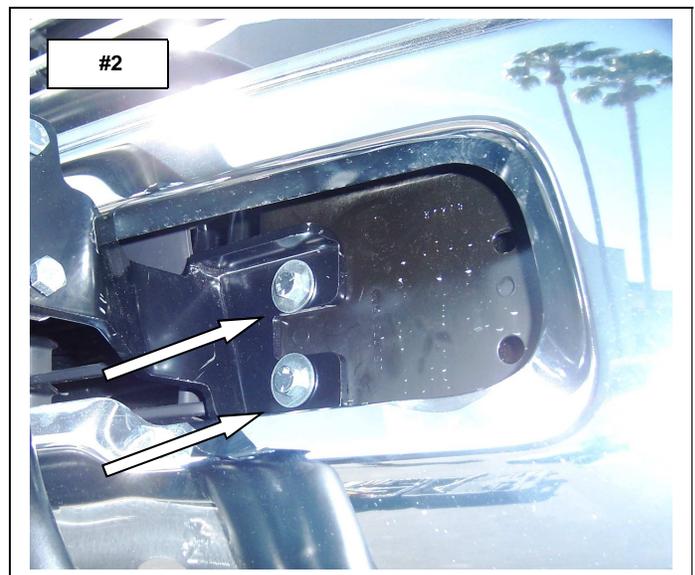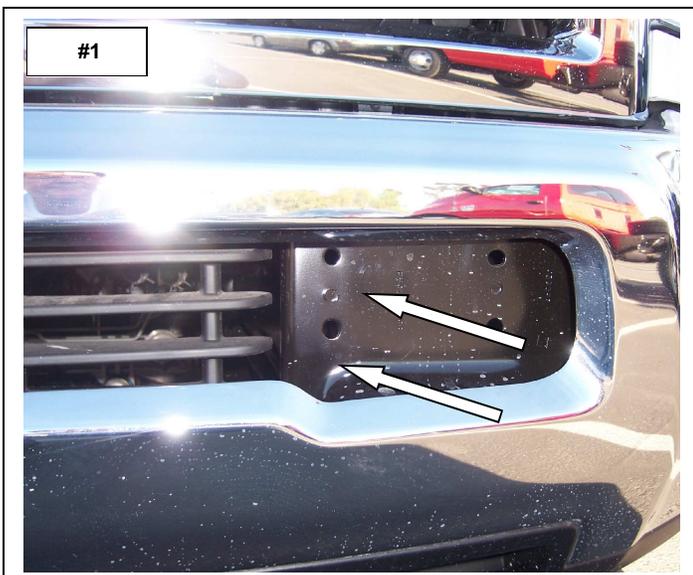

**NOTE:** IF YOUR VEHICLE IS EQUIPPED WITH FACTORY TOW HOOKS, REMOVE ONLY THE (2) TOW HOOK BOLTS CLOSEST TO THE CENTER OF THE VEHICLE. POSITION THE BRACKETS OVER THE TOW HOOKS AND ATTACH THE BRACKETS AND TOW HOOKS TO THE FRAME USING THE 3/8" X 2" HEX BOLTS, WASHERS AND NUTS SUPPLIED. **PHOTO #3**



**STEP-3** POSITION THE RHINO CHARGER BAR MOUNTING TABS BETWEEN THE DRIVER AND PASSENGER SIDE BRACKETS AND ATTACH THE TABS TO THE BRACKETS USING (2) 3/8" X 1" HEX BOLTS, FLAT WASHERS, LOCK WASHERS AND HEX NUTS. **PHOTO #4**

**STEP-4** ALIGN THE RHINO CHARGER BAR AND BRACKET ASSEMBLY WITH THE FRONT OF THE VEHICLE, AND TIGHTEN ALL NUTS AND BOLTS. **PHOTO #5**



**FOR TECHNICAL OR WARRANTY INFORMATION CALL:  
TOLL FREE (888)427-4466 FAX (714)672-0278  
GO RHINO! Products® 591 W. Apollo St. Brea, CA 92821**