

GO RHINO!

PRODUCTS®

DOMINATOR II SERIES SIDESTEPS

ASSEMBLY & INSTALLATION INSTRUCTIONS

PART NO. D24099 09-10 DODGE RAM 1500 QUAD CAB P/U 4DR 2/4WD

Do not attempt to install this product on any vehicle other than the one it is designed for and listed above!


REV. 02/10

PACKING LIST

<u>QTY</u>	<u>PARTS DESCRIPTION</u>	<u>QTY</u>	<u>PARTS DESCRIPTION</u>
24	3/8" X 1 1/4" HEX BOLTS	6	4105TP T-PLATE
42	3/8" FLAT WASHERS	3	D07 SIDE STEP MOUNTING BRACKETS SET
30	3/8" LOCK WASHERS	1	D24099P PASSENGER SIDE STEP
18	3/8" HEX NUTS	1	D24099D DRIVER SIDE STEP
6	VINYL GASKETS		

INSTALLATION INSTRUCTIONS



READ THE INSTRUCTIONS COMPLETELY BEFORE YOU BEGIN THE INSTALLATION

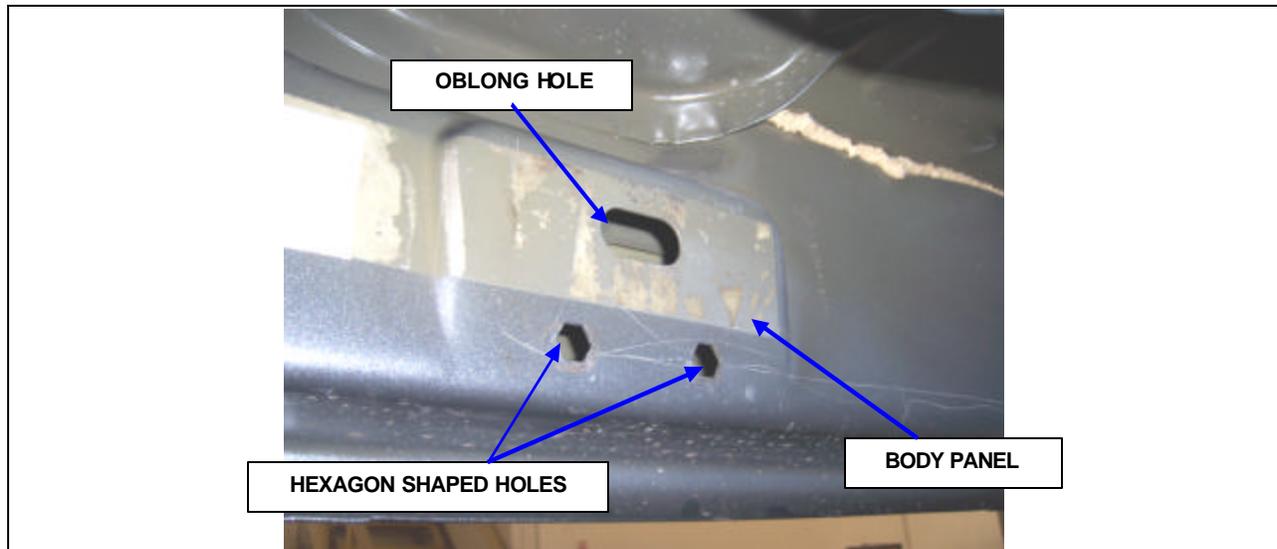

STEP 1. THIS INSTALLATION USES (3) MOUNTING BRACKETS PER SIDE. BEGIN BY INSTALLING THE PASSENGER SIDE FRONT BRACKET. LOCATE THE (2) HEXAGON SHAPED HOLES IN THE UNDERSIDE OF THE BODY PANEL AT THE FRONT OF THE CAB AND REMOVE THE TAPE COVERING THE OBLONG HOLE.




STEP 2. INSERT (1) OF THE T-PLATES THROUGH THE OBLONG HOLE IN THE BODY PANEL AND POSITION THE PLATE INSIDE THE PANEL AS SHOWN. PLACE (1) OF VINYL GASKETS TO THE T-PLATE.

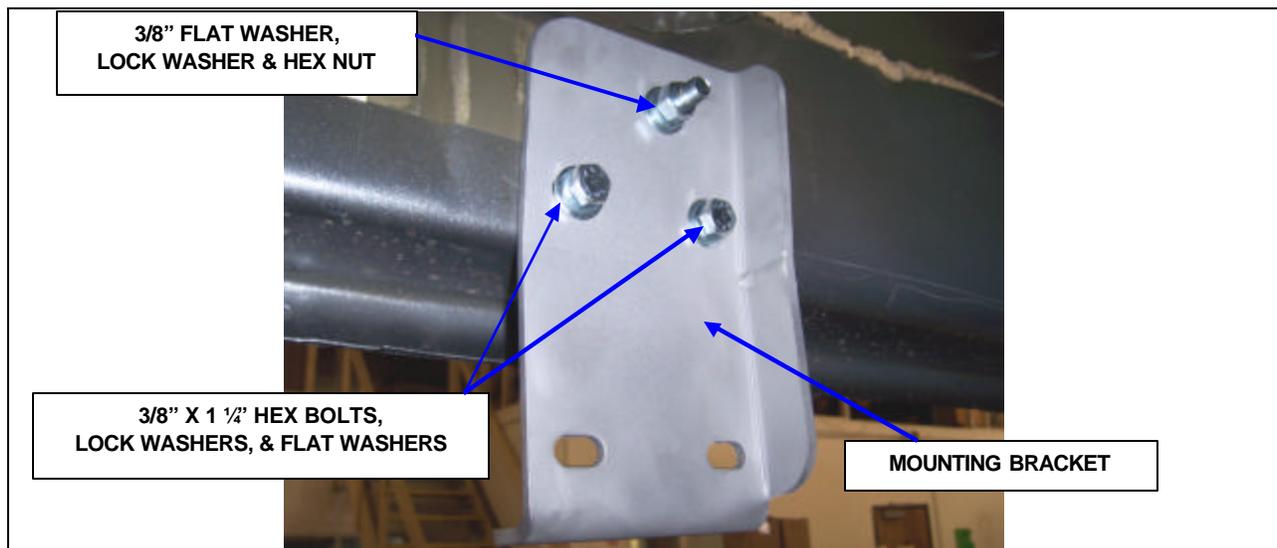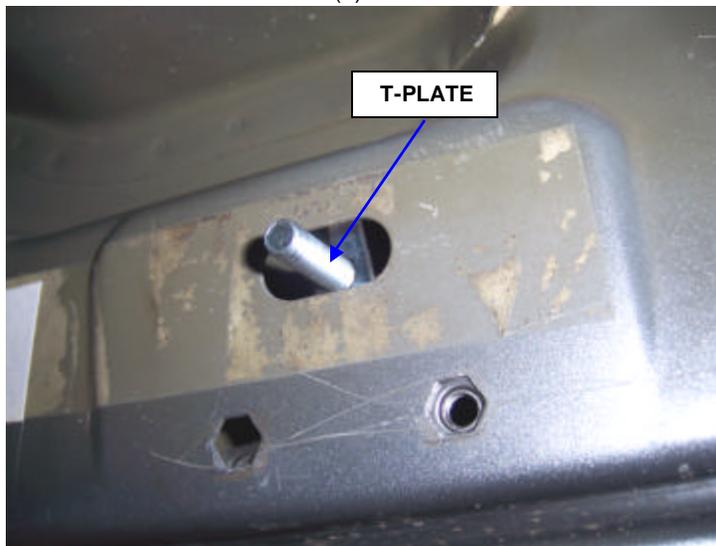

STEP 3. ATTACH ONE OF THE MOUNTING BRACKETS TO THE BODY PANEL USING THE T-PLATE (2) 3/8" X 1 1/4" HEX BOLTS, (3) 3/8" FLAT WASHERS, (3) 3/8" LOCK WASHERS AND (1) 3/8" HEX NUT. HAND TIGHTEN.



STEP 4. REPEAT THE ABOVE PROCEDURE TO INSTALL THE CENTER AND REAR MOUNTING BRACKETS.

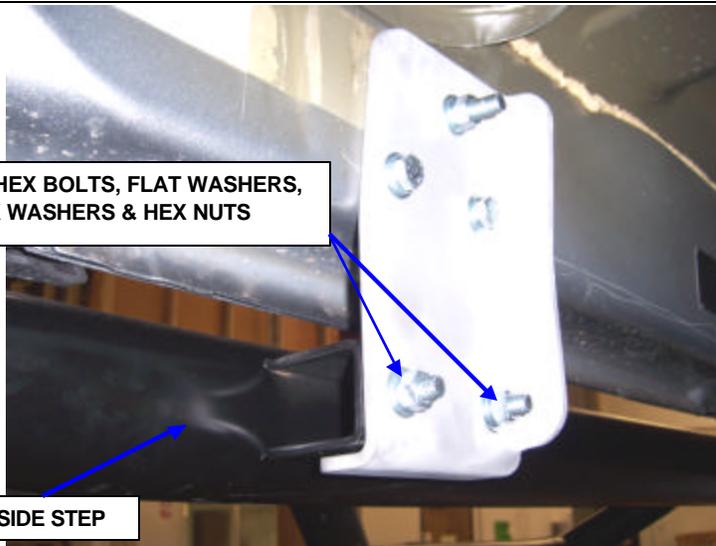

STEP 5. ATTACH THE PASSENGER SIDE STEP TO THE MOUNTING BRACKETS USING (2) 3/8" X 1 1/4" HEX BOLTS, (4) FLAT WASHERS, (2) LOCK WASHERS AND (2) HEX NUTS FOR EACH BRACKET.



STEP 6. ALIGN THE SIDE STEP WITH THE VEHICLE AND TIGHTEN ALL MOUNTING BRACKET AND SIDE STEP NUTS AND BOLTS. REPEAT THE ABOVE PROCEDURE TO INSTALL THE DRIVER SIDE BRACKETS AND SIDE STEP.