



Innovative Truck Racks!

Two Companies ! One Vision !

GO RHINO!
PRODUCTS
Built to demand respect !

DOMINATOR SideSteps **WHEEL - TO - WHEEL**

INSTALLATION INSTRUCTIONS

PART NO. D36039 CHEVY/GMC EXT CAB P/U 2/4WD SHORT BED REV.A 2/08


PARTS LIST

QTY	PARTS DESCRIPTION
6	5/16" U-NUTS
6	5/16" X 1" HEX BOLTS
6	5/16" LOCK WASHERS
6	5/16" FLAT WASHERS
18	3/8" x 1 1/4" HEX BOLTS
18	3/8" LOCK WASHERS
18	3/8" HEX NUTS


QTY	PARTS DESCRIPTION
18	3/8" FLAT WASHERS
3	C07D DRIVER MOUNTING BRACKETS
3	C07P PASSENGER MOUNTING BRACKETS
1	339FP FRONT PASSENGER SIDESTEP SECTION
1	339RP REAR PASSENGER SIDESTEP SECTION
1	339FD FRONT DRIVER SIDESTEP SECTION
1	339RD REAR DRIVER SIDESTEP SECTION

STEP 1. Read the instructions completely before you begin the installation.



If the vehicle is equipped with factory side steps, remove the side steps and fasteners.

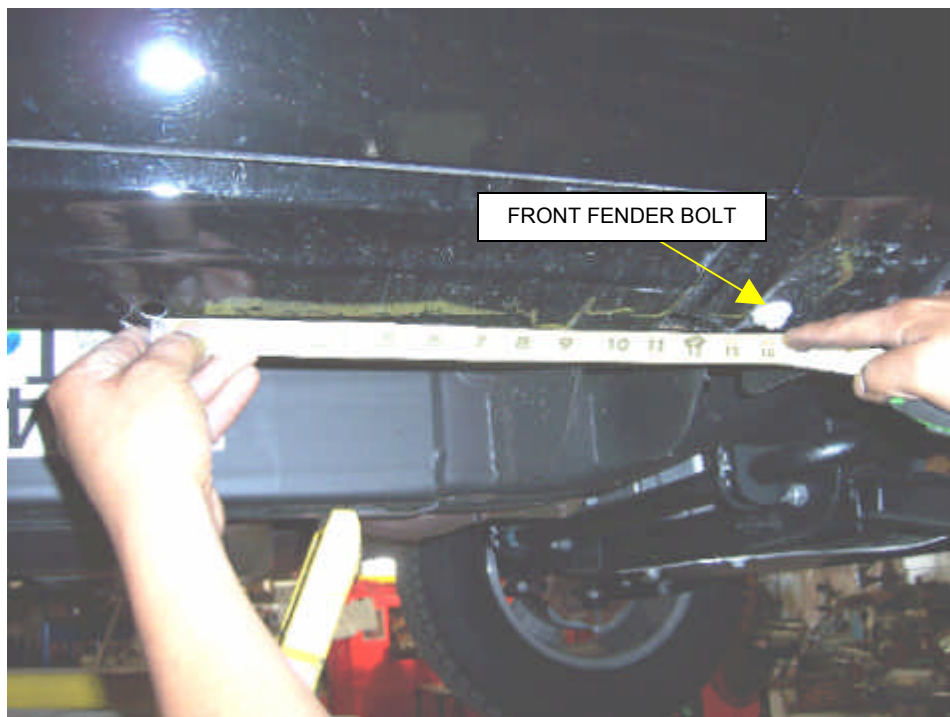


STEP 2. This installation uses three mounting brackets per side. Begin by installing the passenger side front mounting bracket. Measure rearward from the front fender bolt approximately 14" and locate the holes in the body pinch mold, rocker panel and the plastic plug in the rocker panel.

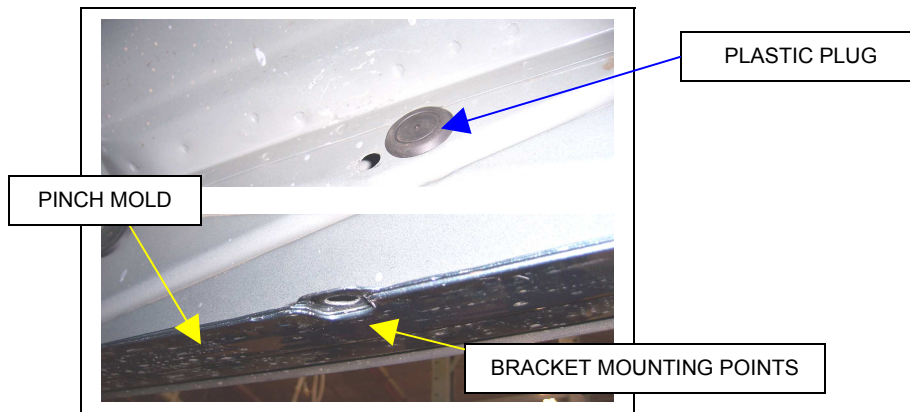


STEP 3. Remove the plastic plug from the rocker panel and install (1) 5/16" U-NUT as shown.

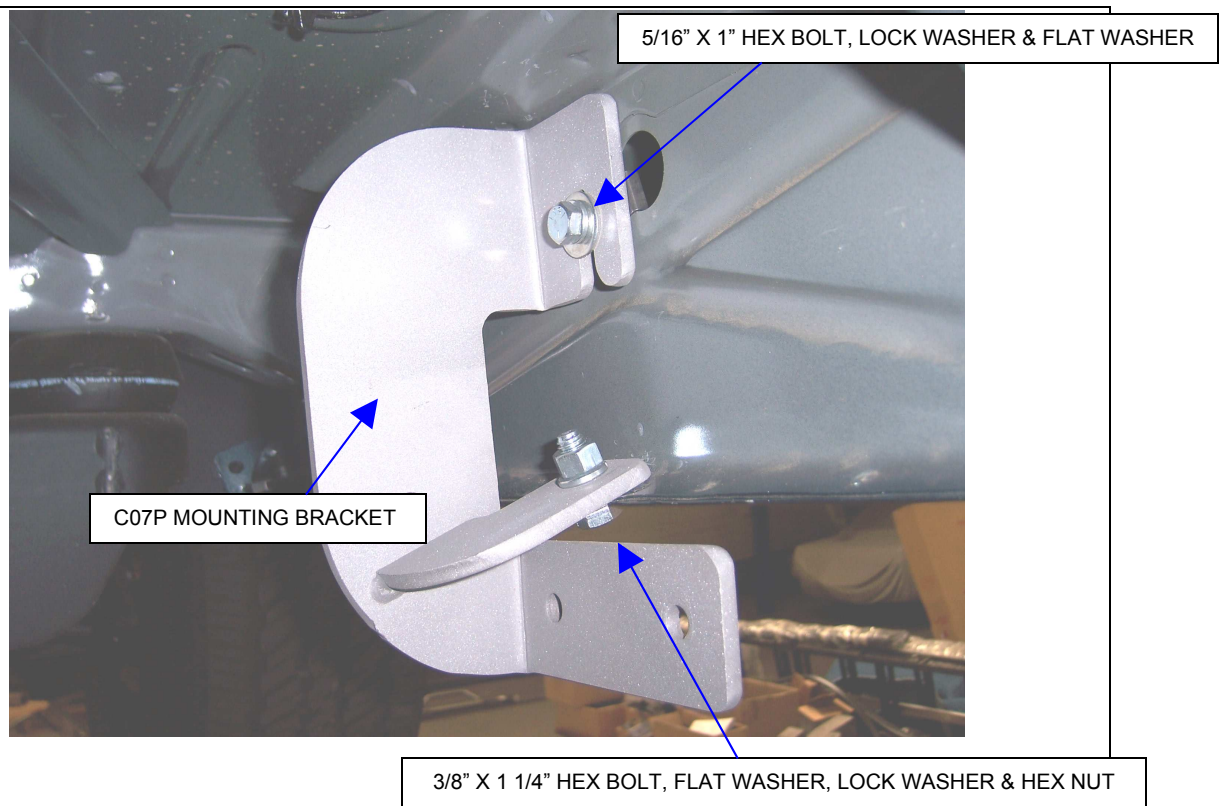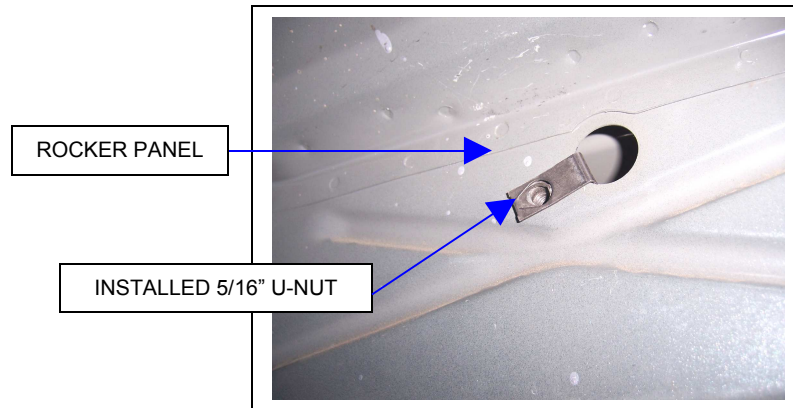

STEP 4. Loosely attach one of the C07P mounting brackets to the rocker panel and pinch mold using the 5/16" and 3/8" fasteners as shown.

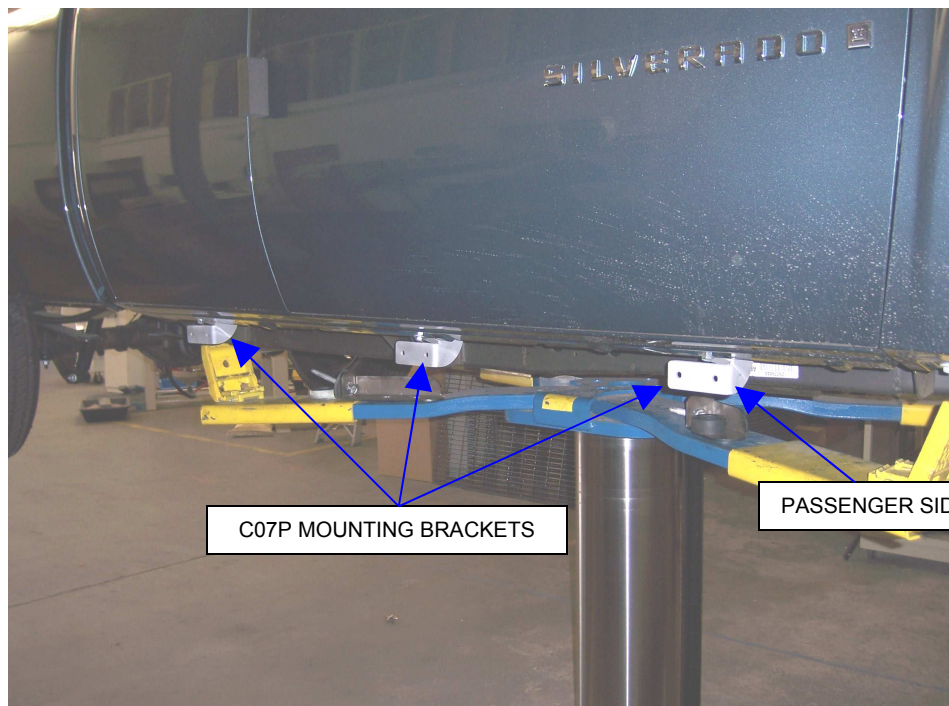

STEP 5. Locate the holes in the body for the center and rear mounting brackets. Measure rearward from the front fender bolt 37 3/4" for the center and 67" for the rear bracket. Repeat steps 3 & 4 to install the center and rear brackets.

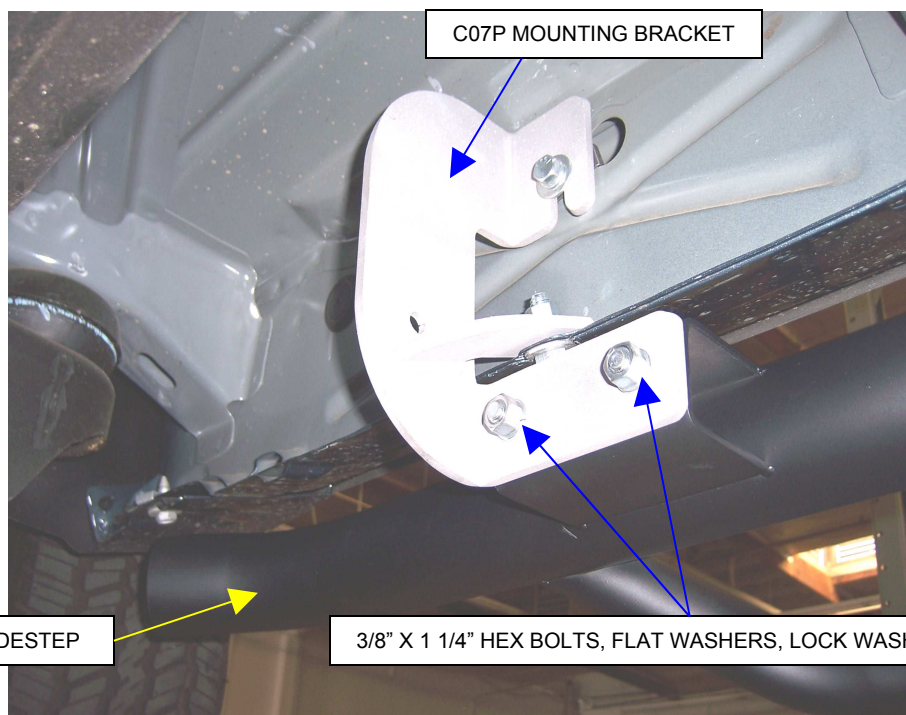

STEP 6. Position the passenger sidestep up to the vehicle and loosely attach it to the mounting brackets using the 3/8" x 1 1/4" hex bolts, flat washers, lock washers and hex nuts.

STEP 7. Tighten all mounting bracket and sidestep nuts and bolts.

STEP 8. Repeat the above steps to install the driver side mounting brackets and sidestep.

VISIT OUR WEBSITE FOR OUR COMPLETE PRODUCT LINE!

WWW.GORHINO.COM . PH: (888) 427- 4466 . BREA, CALIFORNIA