



INSTALLATION INSTRUCTIONS

DOMINATOR III SERIES SIDE STEPS PART NUMBER D360741 (B)

01-06 CHEVROLET SILVERADO / GMC SIERRA 2500HD, 3500HD CREW CAB P/U 4DR 2/4WD

Do not attempt to install this product on any vehicle other than the one it is designed for and listed above!

PARTS LIST

<u>QTY</u>	<u>PARTS DESCRIPTION</u>	<u>QTY</u>	<u>PARTS DESCRIPTION</u>
12	1/4" X 3/4" SELF TAPPING HEX BOLTS	12	3/8" X 1 1/4" HEX BOLTS
24	3/8" HEX NUTS	6	C99 MOUNTING BRACKETS
24	3/8" LOCK WASHERS	1	D360741D DRIVER SIDE STEP
36	3/8" FLAT WASHERS	1	D360741P PASSENGER SIDE STEP
12	3/8" X 1" CARRIAGE BOLTS		


Read the instructions completely before you begin the installation.


If your vehicle is equipped with factory side steps, remove the fasteners and side steps.

This installation uses (3) mounting brackets per side, and requires drilling holes in the under side of the body and lower body pinch mold.

It is the installer's responsibility to confirm all measurements and that there are no obstructions such as brake, fuel or electrical lines before drilling.

STEP-1 Beginning with the passenger side measure rearward from the front fender bolt (refer to diagram for dimensions) and scribe (4) vertical lines on the body pinch mold.

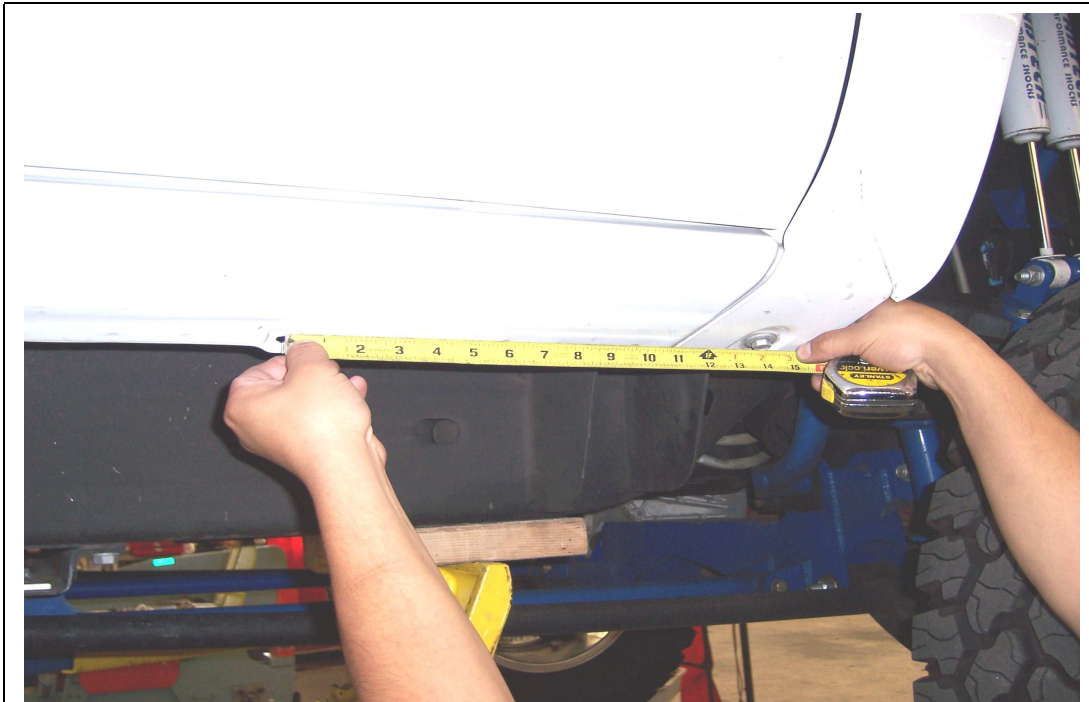


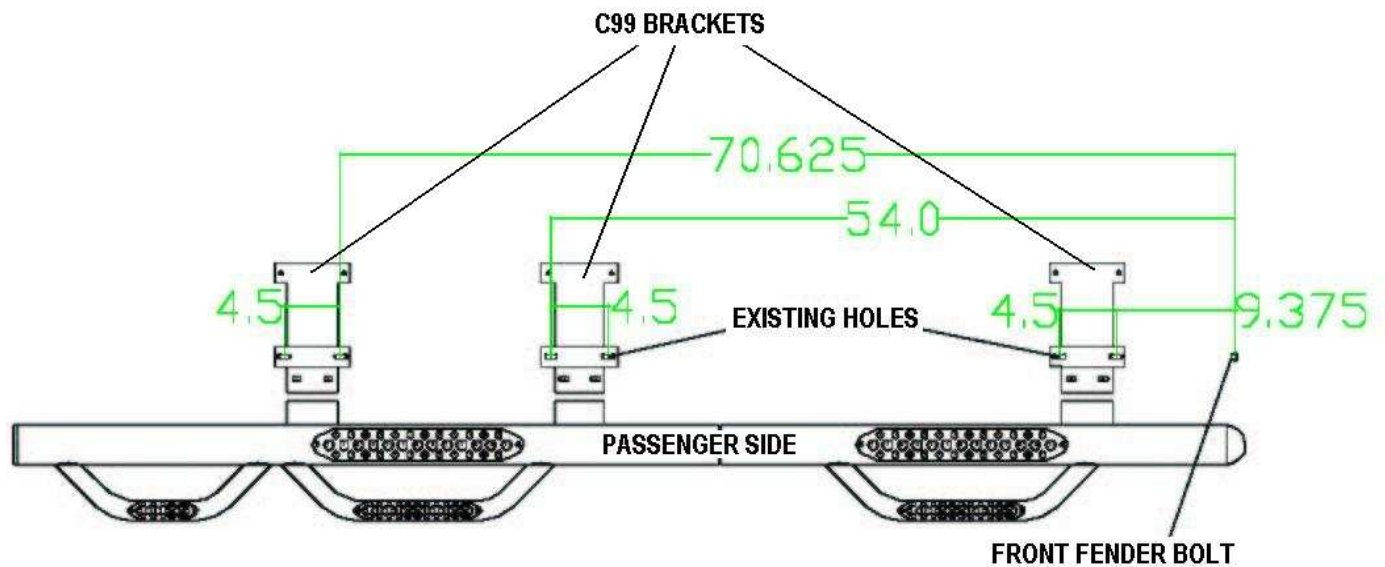

STEP-2 Measure up from the bottom edge of the pinch mold $7/16"$ and scribe intersecting lines.



STEP-3 Confirm the measurements, center punch and drill $3/8"$ holes through the body pinch mold. Repeat the above procedure for the driver side.

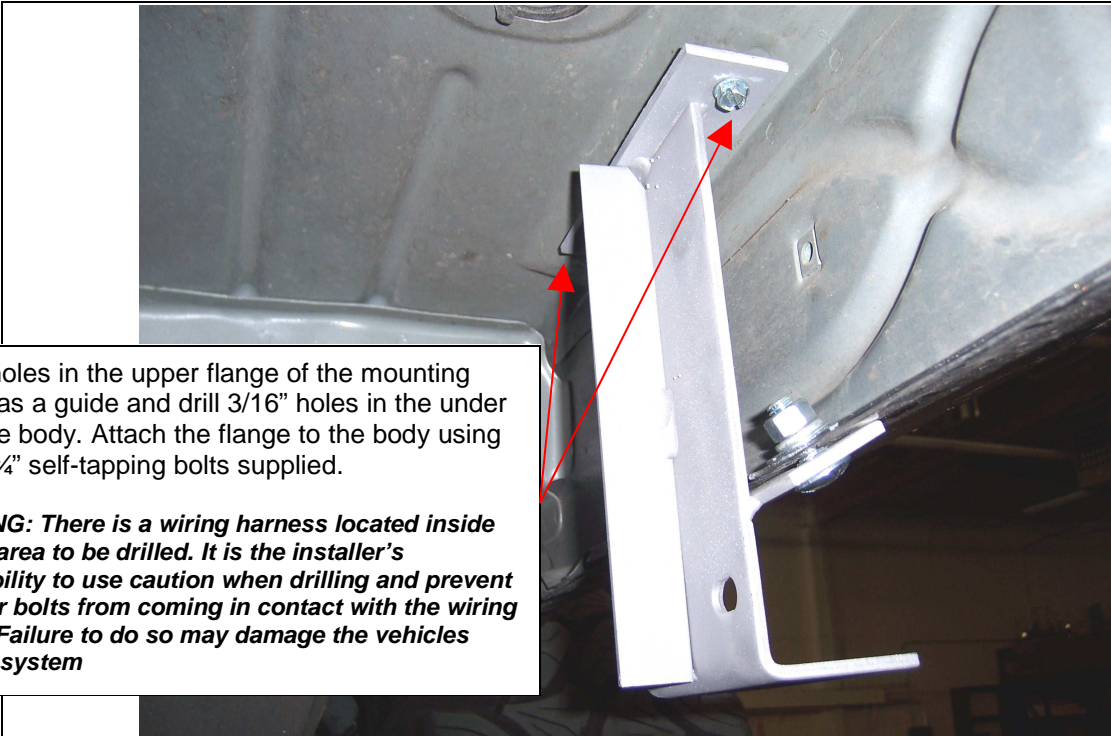

Use the holes in the upper flange of the mounting brackets as a guide and drill 3/16" holes in the under side of the body. Attach the flange to the body using the 1/4" x 3/4" self-tapping bolts supplied.

****WARNING:** *There is a wiring harness located inside the body area to be drilled. It is the installer's responsibility to use caution when drilling and prevent the drill or bolts from coming in contact with the wiring harness. Failure to do so may damage the vehicles electrical system*

STEP-4 Loosely attach the lower flange of the mounting brackets to the bottom of the body pinch mold using the 3/8" x 1" carriage bolts, flat washers, lock washers and nuts as shown.



STEP-5 Position the passenger sidestep up to the mounting brackets and loosely attach it to the brackets using the 3/8" x 1 1/4" hex bolts, flat washers, lock washers and nuts.

STEP-6 Align sidestep with the body and then tighten all mounting bracket and sidestep nuts and bolts.

STEP-7 Repeat the above installation steps to install the driver side mounting brackets and sidestep.

FOR TECHNICAL OR WARRANTY INFORMATION CALL:
TOLL FREE (888)427-4466 FAX (714)672-0278
GO RHINO! Products® 591 W. Apollo St. Brea, CA 92821