



Innovative Truck Racks!

Two Companies ! One Vision !



Built to demand respect !

DOMINATOR III SideSteps WHEEL - TO - WHEEL

INSTALLATION INSTRUCTIONS


PART NO. D36075 CHEVY/GMC CREW CAB P/U 2/4WD SHORT BED REV.A 2/08

PARTS LIST



QTY	PARTS DESCRIPTION	QTY	PARTS DESCRIPTION
4	5/16" U-NUTS	18	3/8" FLAT WASHERS
4	5/16" X 1" HEX BOLTS	3	C07D DRIVER MOUNTING BRACKETS
2	8M X 25M HEX BOLTS	3	C07P PASSENGER MOUNTING BRACKETS
6	5/16" LOCK WASHERS	3	C07D DRIVER MOUNTING BRACKETS
6	5/16" FLAT WASHERS	1	375FP FRONT PASSENGER SIDESTEP SECTION
18	3/8" x 1 1/4" HEX BOLTS	1	375RP REAR PASSENGER SIDESTEP SECTION
18	3/8" LOCK WASHERS	1	375FD FRONT DRIVER SIDESTEP SECTION
18	3/8" HEX NUTS	1	375RD REAR DRIVER SIDESTEP SECTION

STEP 1. Read the instructions completely before you begin the installation.


If the vehicle is equipped with factory side steps, remove the fasteners and side steps.

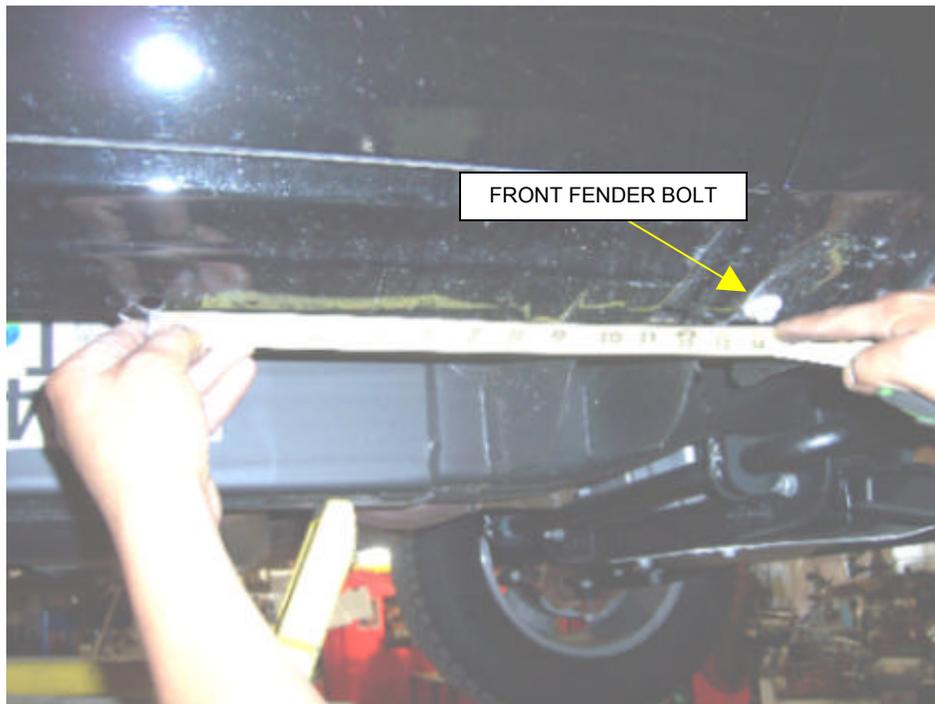



STEP 2. This installation uses three mounting brackets per side. Begin by installing the passenger side front mounting bracket. Measure rearward from the front fender bolt approximately 14" and locate the single hole in the body pinch mold and the square nut spot welded in the rocker panel.

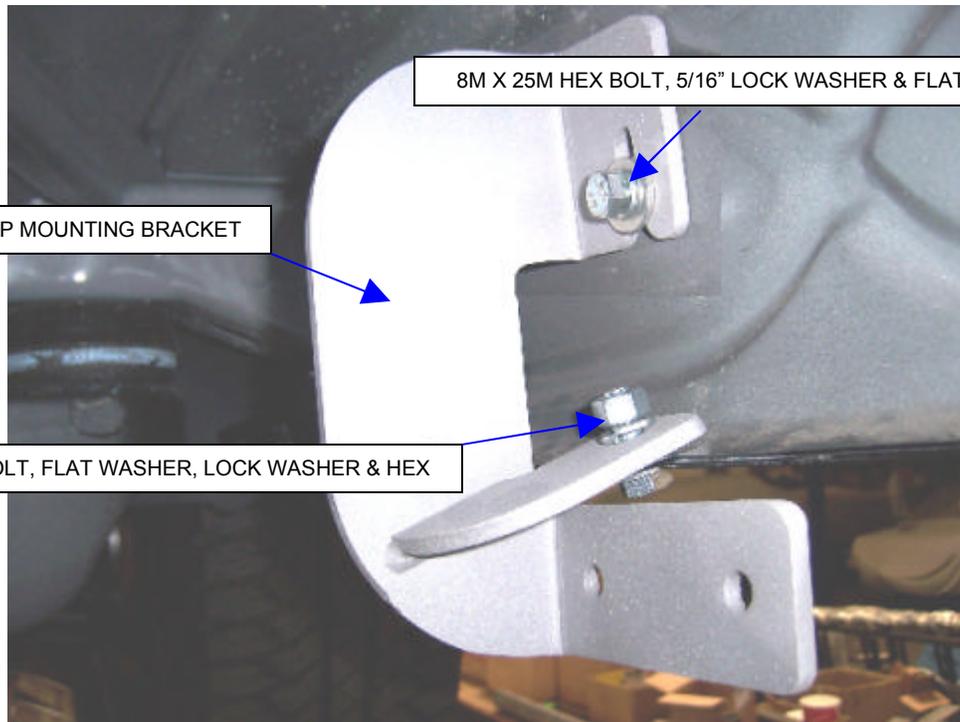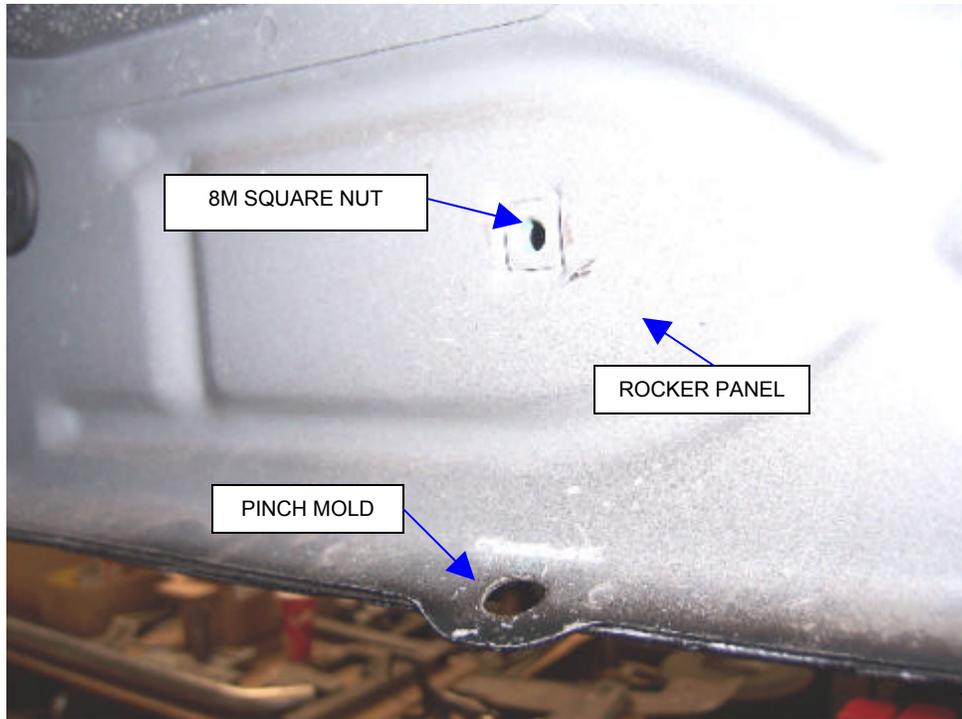



STEP 3. Loosely attach one of the C07P mounting brackets to the rocker panel and pinch mold using the 8M, 5/16" and 3/8" fasteners as shown.

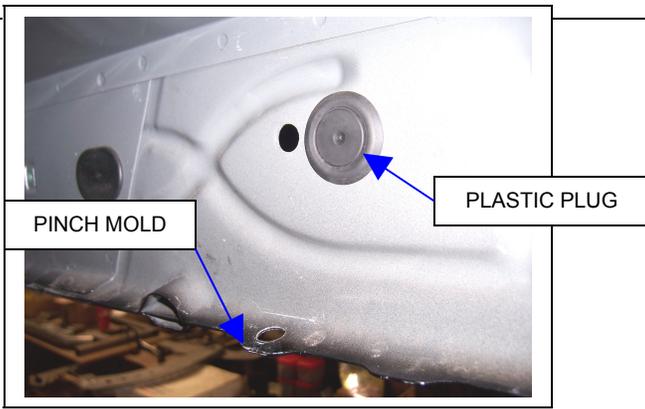

STEP 4. Locate the holes in the body pinch mold and rocker panel for the center and rear mounting brackets. Measure rearward from the front fender bolt approximately 58 7/8" for the center and 75 1/8" for the rear bracket. Remove the plastic plugs from the rocker panel and install 5/16" U-NUTS in the rocker panel as shown.

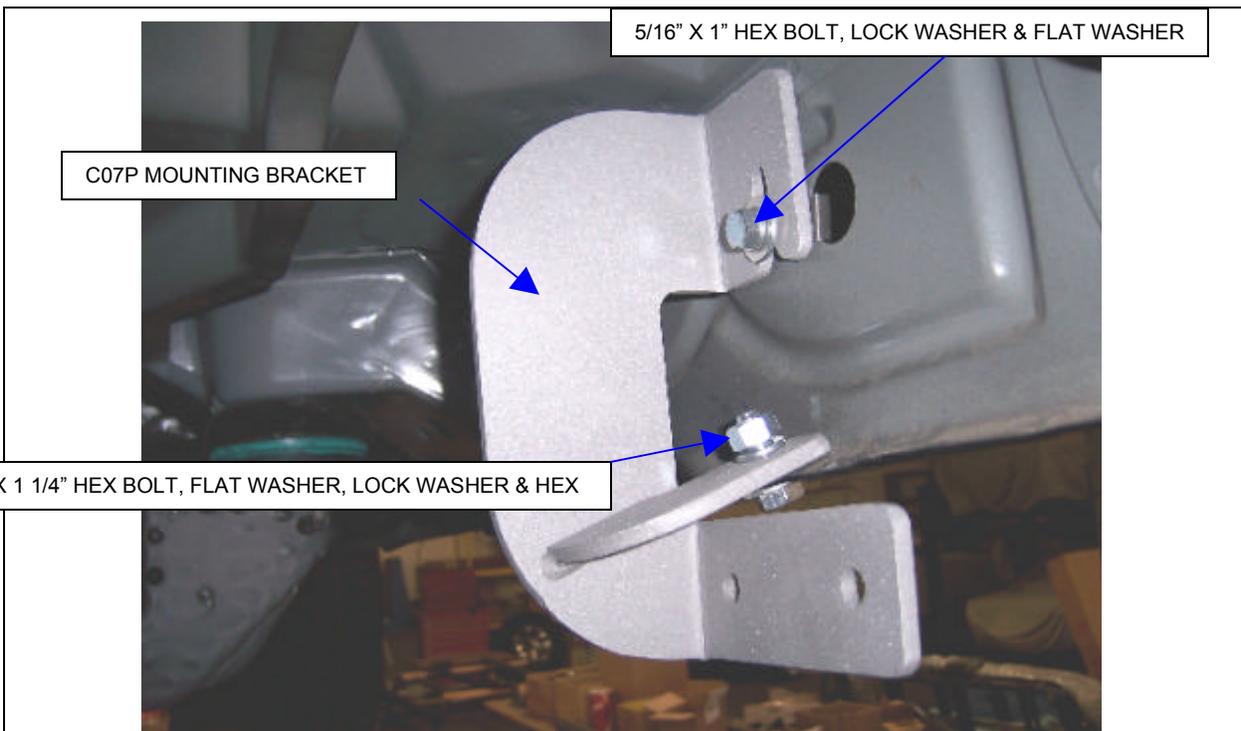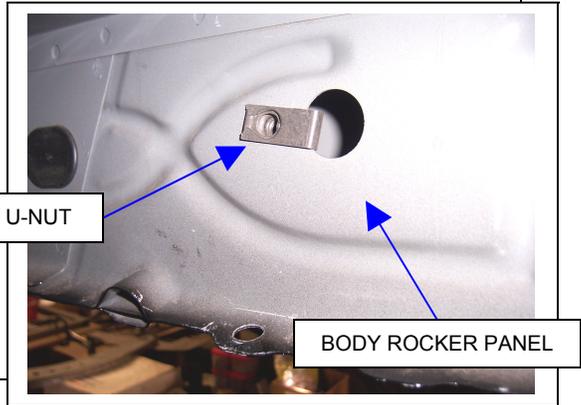

STEP 5. Loosely attach the two remaining C07P mounting brackets to the rocker panel and pinch mold using the 5/16" and 3/8" fasteners as shown.

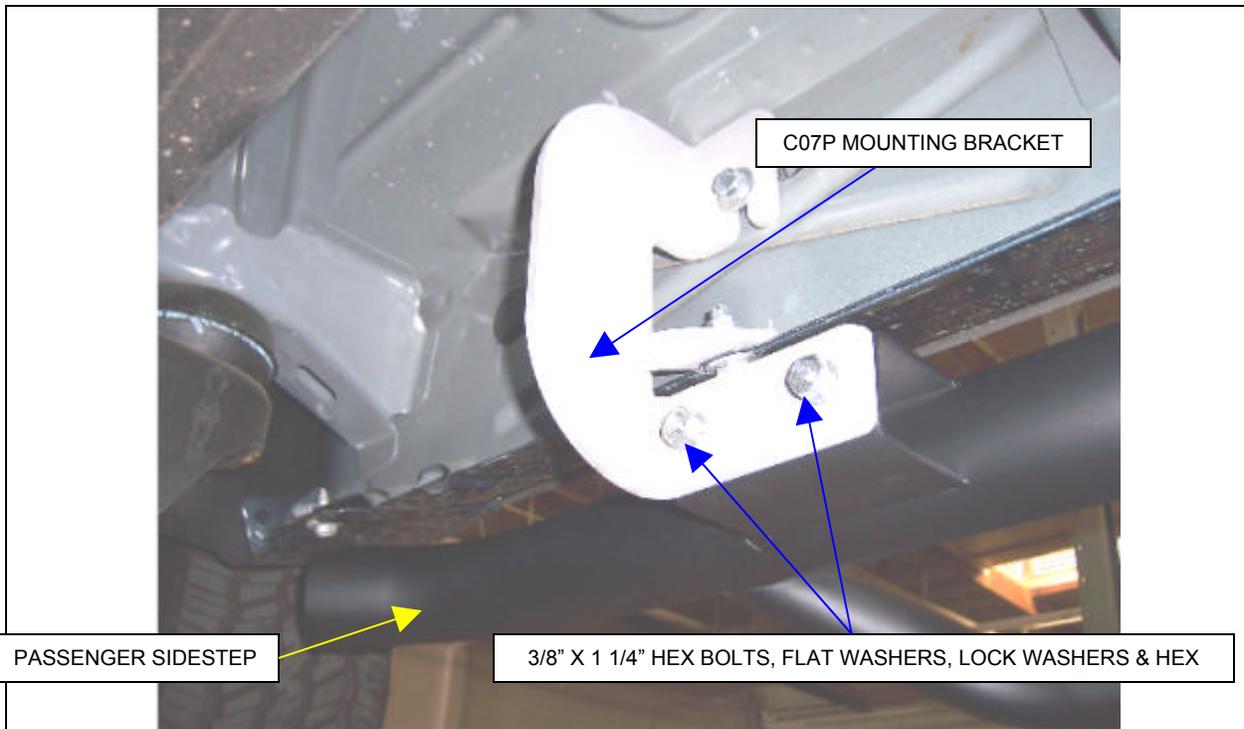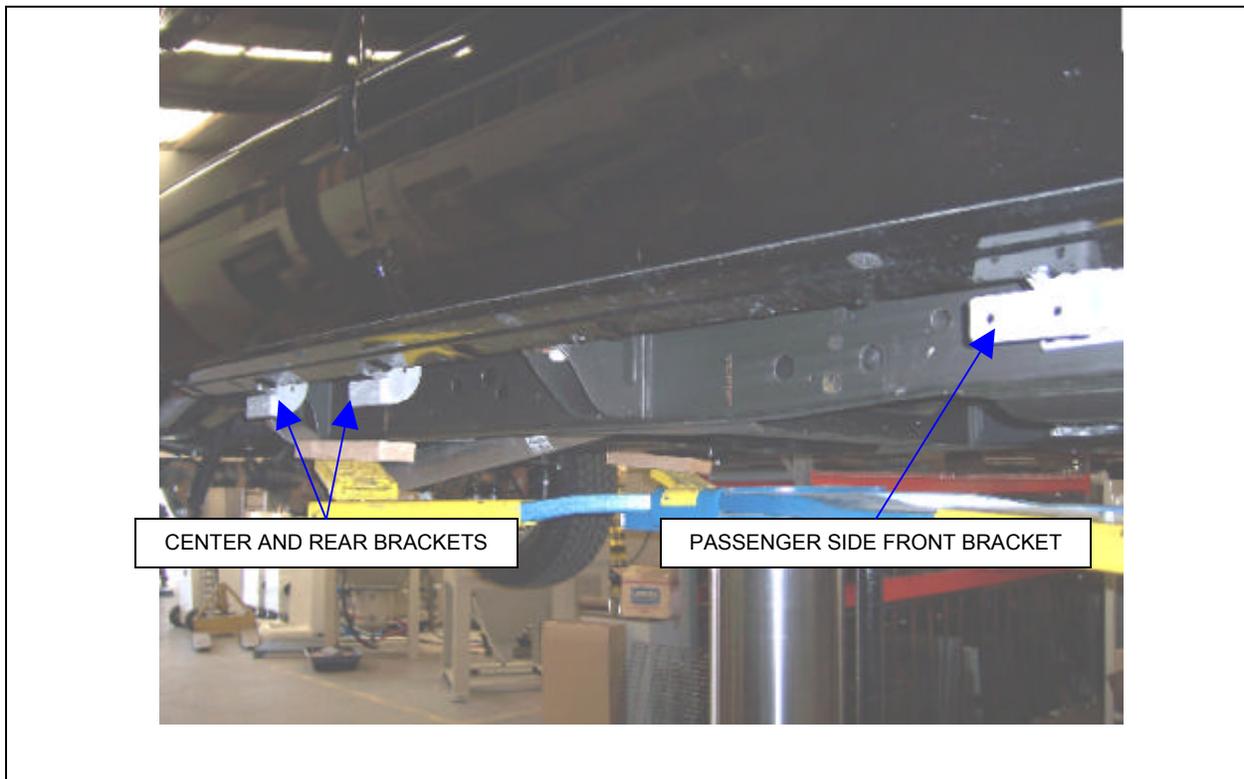

STEP 6. Position the passenger sidestep up to the vehicle and loosely attach it to the mounting brackets using the 3/8" x 1 1/4" hex bolts, flat washers, lock washers and hex nuts.

STEP 7. Tighten all mounting bracket and sidestep nuts and bolts.

STEP 8. Repeat the above steps to install the driver side mounting brackets and sidestep.

VISIT OUR WEBSITE FOR OUR COMPLETE PRODUCT LINE!
WWW.GORHINO.COM . PH: (888) 427- 4466 . BREA, CALIFORNIA