



INSTALLATION INSTRUCTIONS

DOMINATOR III SERIES SIDE STEPS PART NUMBER D360811 (B)

07-10 CHEVROLET SILVERADO/GMC SIERRA 2500HD, 3500HD CREW CAB LONG BED P/U 4DR 2/4WD

Do not attempt to install this product on any vehicle other than the one it is designed for and listed above!


PARTS LIST

<u>QTY</u>	<u>PARTS DESCRIPTION</u>
4	5/16" U-NUTS
4	5/16" X 1" HEX BOLTS
2	8M X 25M HEX BOLTS
6	5/16" LOCK WASHERS
6	5/16" FLAT WASHERS
18	3/8" x 1 1/4" HEX BOLTS
18	3/8" LOCK WASHERS



<u>QTY</u>	<u>PARTS DESCRIPTION</u>
18	3/8" HEX NUTS
18	3/8" FLAT WASHERS
3	C07D DRIVER MOUNTING BRACKETS
3	C07P PASSENGER MOUNTING BRACKETS
1	D360811D DRIVER SIDE STEP
1	D360811P PASSENGER SIDE STEP

STEP-1 Read the instructions completely before you begin the installation.


If the vehicle is equipped with factory side steps, remove the fasteners and side steps.

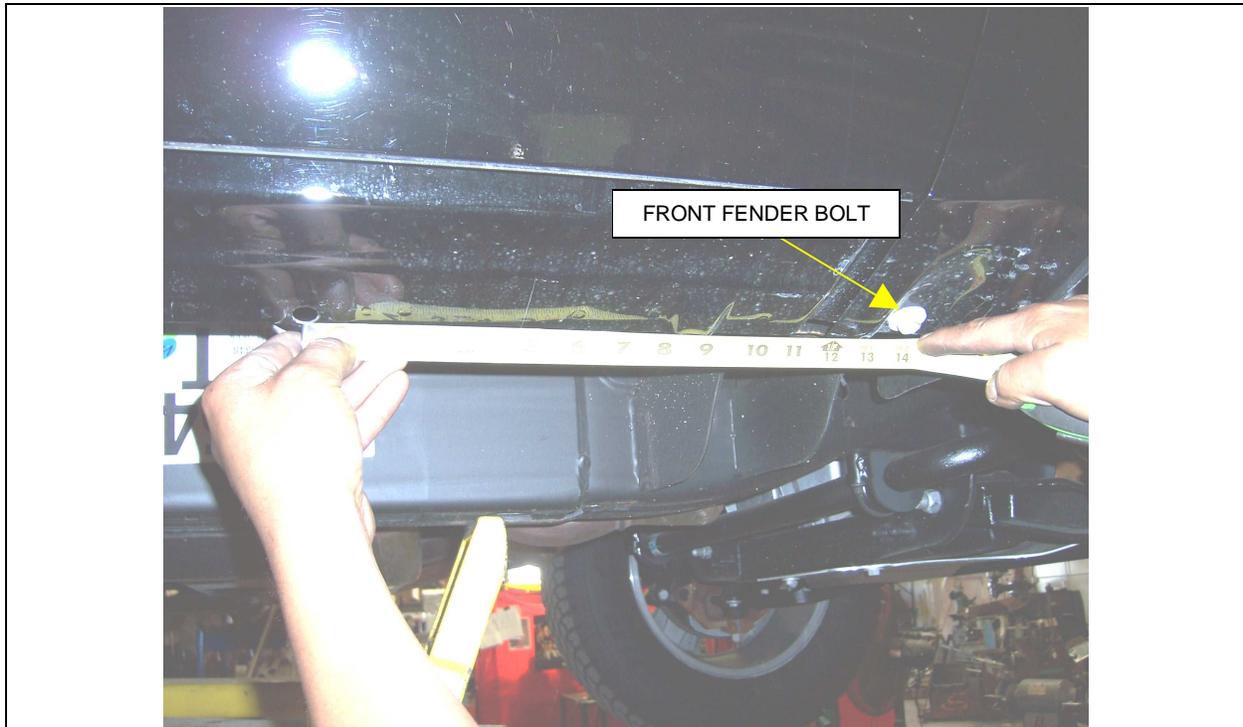

STEP-2 This installation uses three mounting brackets per side. Begin by installing the passenger side front mounting bracket. Measure rearward from the front fender bolt approximately 14" and locate the single hole in the body pinch mold and the square nut spot welded in the rocker panel.

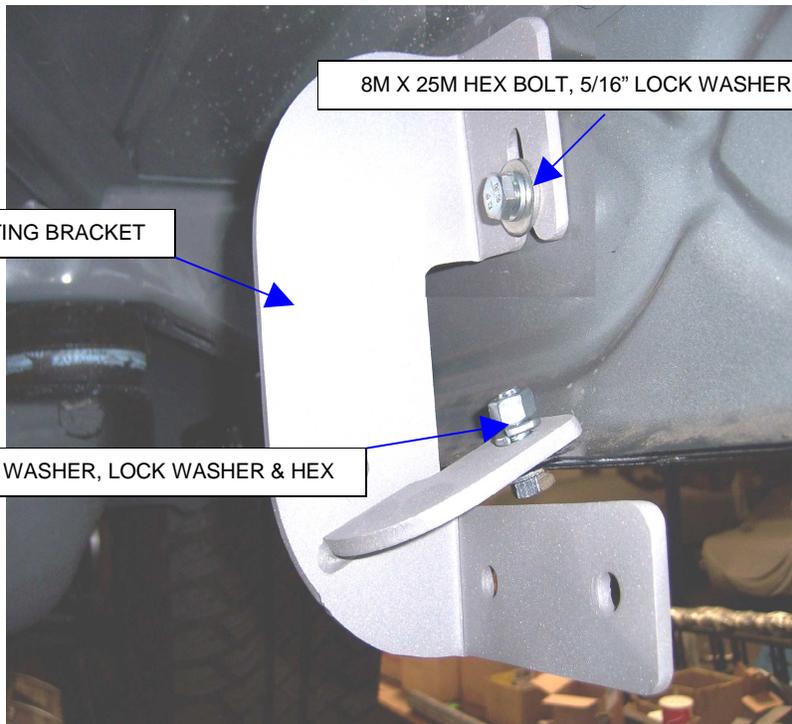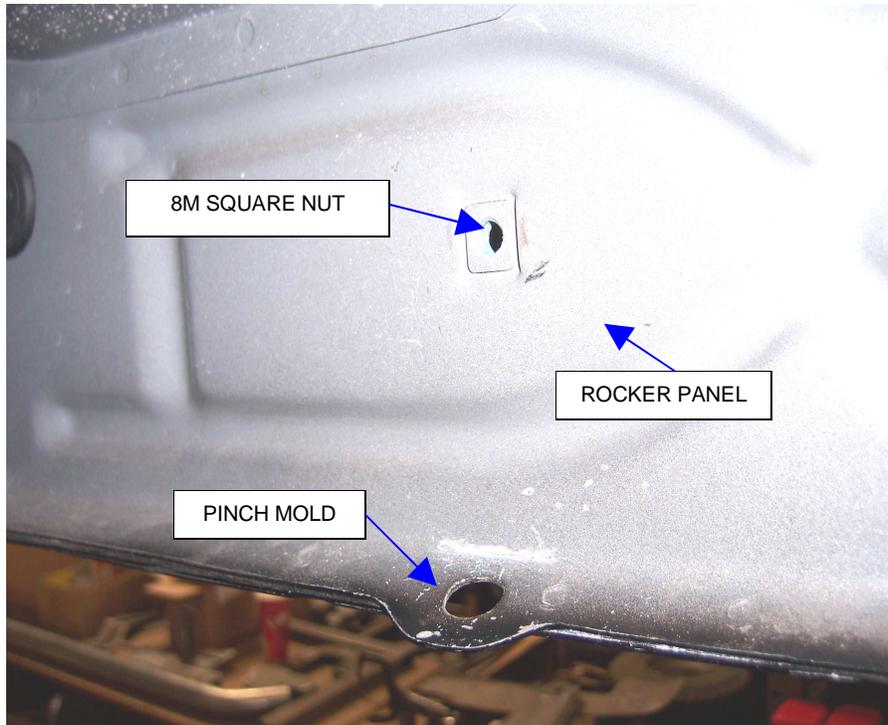


STEP-3 Loosely attach one of the C07P mounting brackets to the rocker panel and pinch mold using the 8M, 5/16" and 3/8" fasteners as shown.

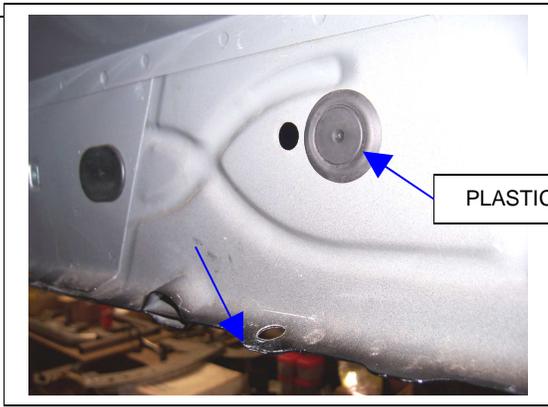


PLASTIC PLUG

STEP-4 Locate the holes in the body pinch mold and rocker panel for the center and rear mounting brackets. Measure rearward from the front fender bolt approximately 58 7/8" for the center and 75 1/8" for the rear bracket. Remove the plastic plugs from the rocker panel and install 5/16" U-NUTS in the rocker panel as shown.

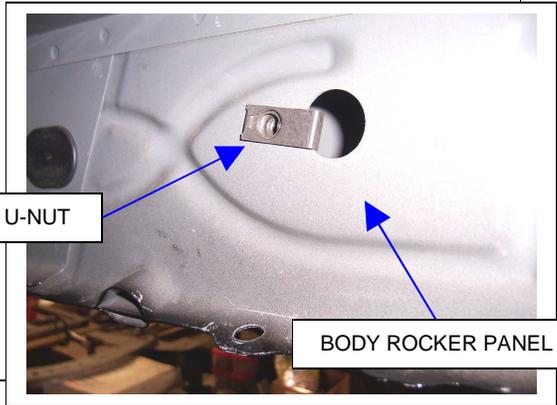

INSTALLED 5/16" U-NUT

BODY ROCKER PANEL

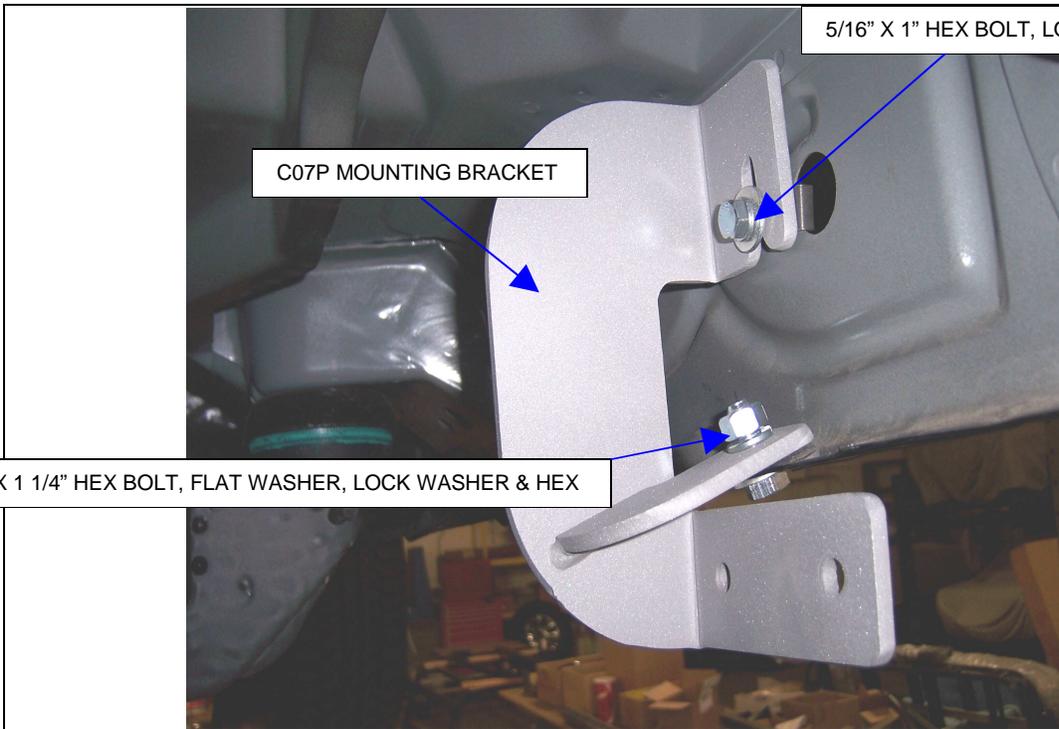


5/16" X 1" HEX BOLT, LOCK WASHER & FLAT WASHER

C07P MOUNTING BRACKET


3/8" X 1 1/4" HEX BOLT, FLAT WASHER, LOCK WASHER & HEX

STEP-5 Loosely attach the two remaining C07P mounting brackets to the rocker panel and pinch mold using the 5/16" and 3/8" fasteners as shown.

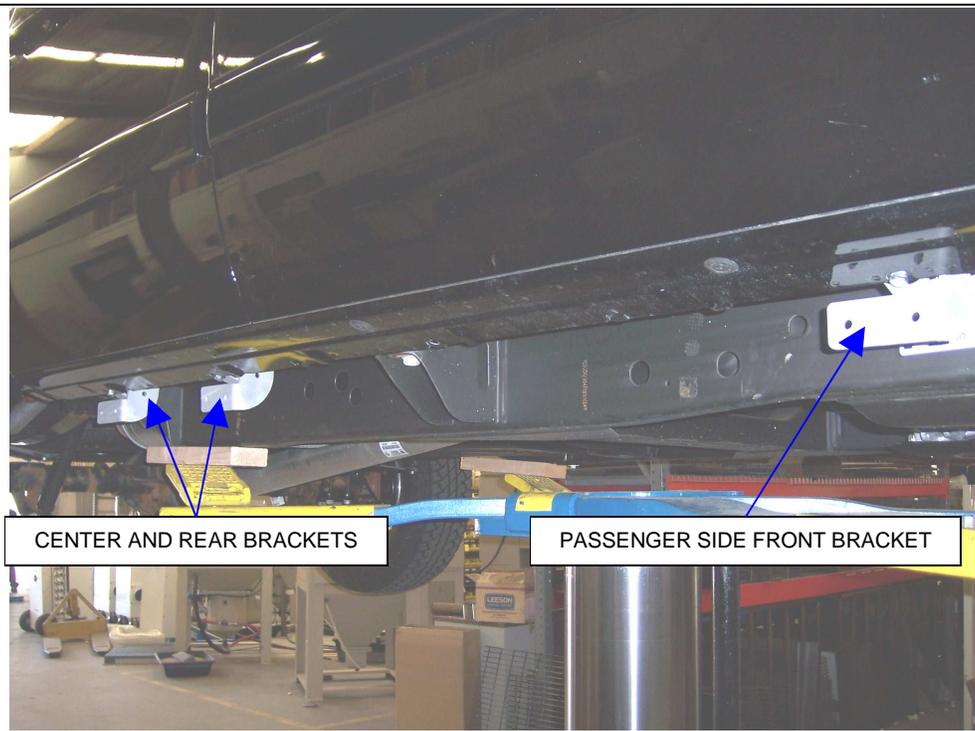

CENTER AND REAR BRACKETS

PASSENGER SIDE FRONT BRACKET

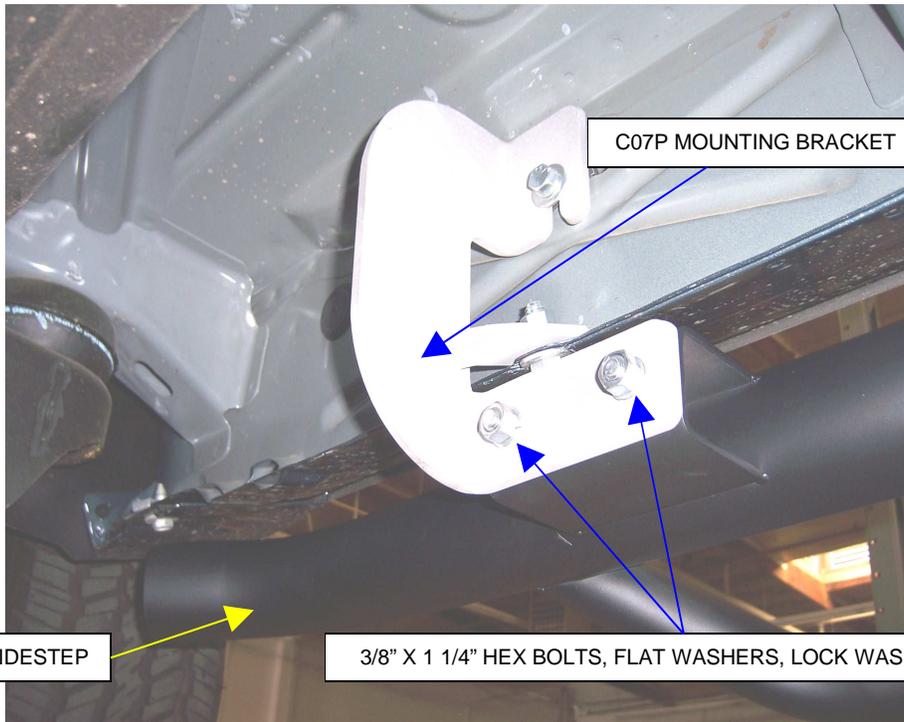

C07P MOUNTING BRACKET

PASSENGER SIDESTEP

3/8" X 1 1/4" HEX BOLTS, FLAT WASHERS, LOCK WASHERS & HEX

STEP-6 Position the passenger side step up to the vehicle and loosely attach it to the mounting brackets using the 3/8" x 1 1/4" hex bolts, flat washers, lock washers and hex nuts.

STEP-7 Tighten all mounting bracket and sidestep nuts and bolts.

STEP-8 Repeat the above steps to install the driver side mounting brackets and side step.

**FOR TECHNICAL OR WARRANTY INFORMATION CALL:
TOLL FREE (888)427-4466 FAX (714)672-0278
GO RHINO! Products® 591 W. Apollo St. Brea, CA 92821**