




## INSTALLATION INSTRUCTIONS



DOMINATOR III SERIES SIDE STEPS PART NUMBER D360881 (B)  
 07-11 CHEVROLET SILVERADO / GMC SIERRA 1500 CREW CAB P/U 4DR 2/4WD  
**Do not attempt to install this product on any vehicle other than the one it is designed for and listed above!**

PARTS LIST		PARTS LIST	
QTY	PART DESCRIPTION	QTY	PART DESCRIPTION
4	5/16" U-NUT	16	3/8" HEX NUT
4	5/16" X 1" HEX BOLT	16	3/8" FLAT WASHER
4	8M X 25M HEX BOLT	3	C07D DRIVER BRACKET
8	5/16" LOCK WASHER	3	C07P PASSENGER BRACKET
8	5/16" FLAT WASHER	1	D360881D DRIVER SIDE STEP
16	3/8" x 1 1/4" HEX BOLT	1	D360881P PASSENGER SIDE STEP
16	3/8" LOCK WASHER		

Read the instructions completely before you begin the installation.

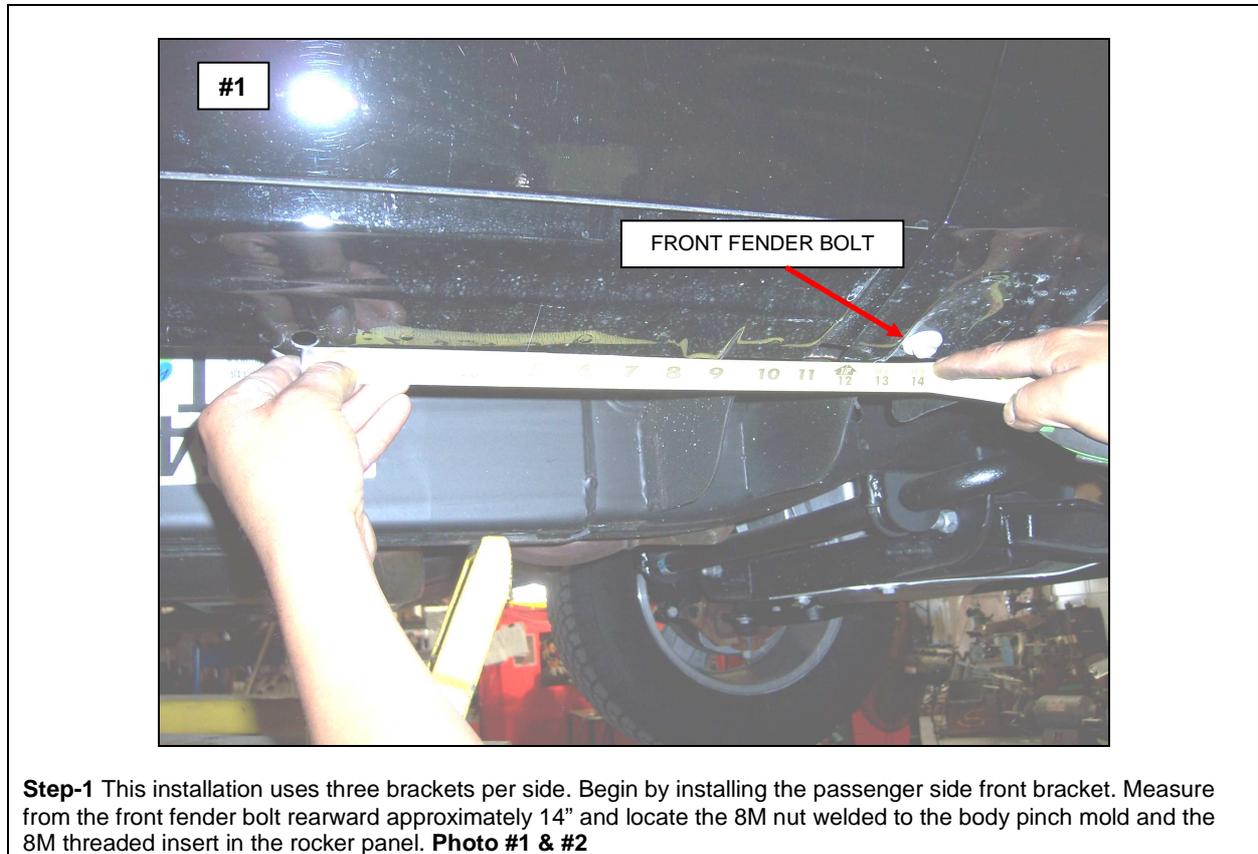


FODI7.003.I

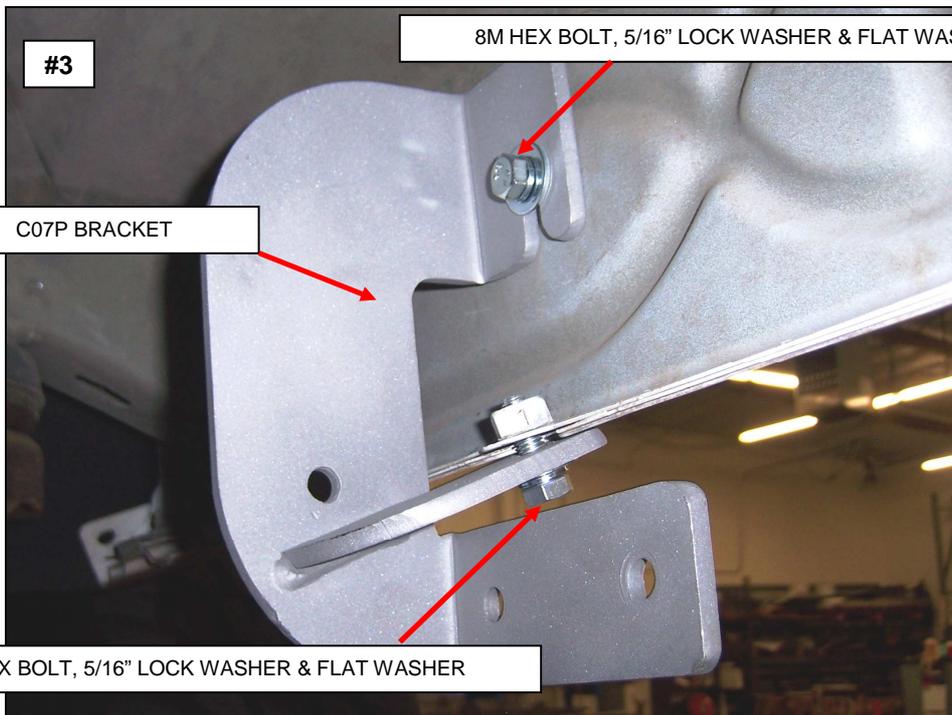
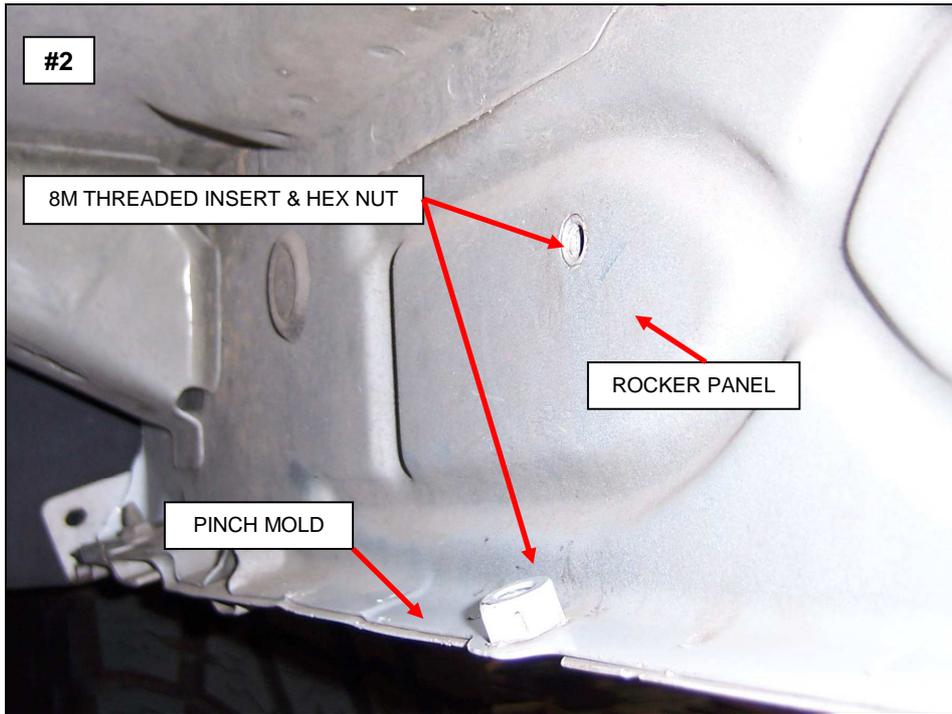


**Step-2** Attach one of the C07P brackets to the rocker panel and pinch mold using (2) 8M hex bolts, (2) 5/16" lock washers and (2) 5/16" flat washers. Leave the bolts loose for final adjustment. **Photo #3**


**Step-3** Measure from the front fender bolt reward approximately 58 7/8" for the center bracket and locate the hole in the body pinch mold and the plastic plug in the rocker panel. Remove the plastic plug from the rocker panel and install (1) 5/16" U-Nut in the rocker panel. **Photo #4 & #5**

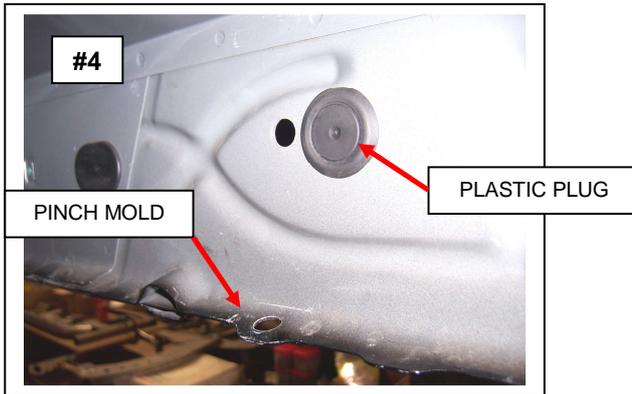


**Step-4** Measure from the front fender bolt reward approximately 75 1/8" for the rear bracket and locate the hole in the body pinch mold and the plastic plug in the rocker panel. Remove the plastic plug from the rocker panel and install (1) 5/16" U-Nut in the rocker panel.

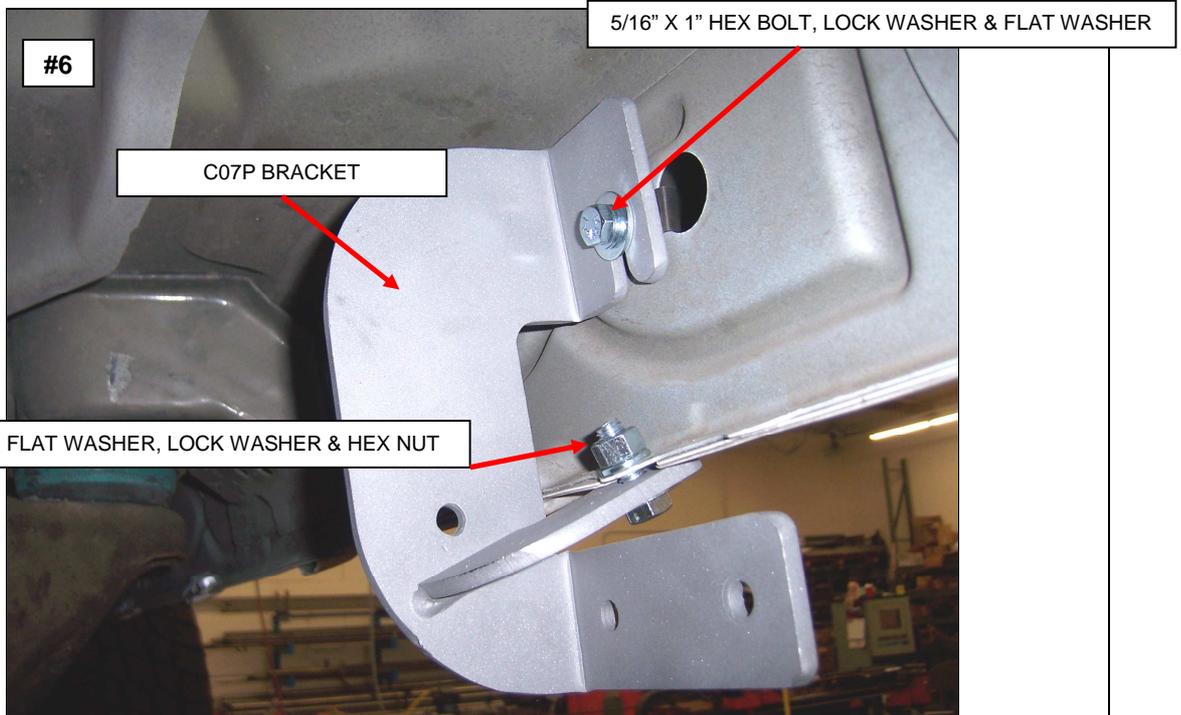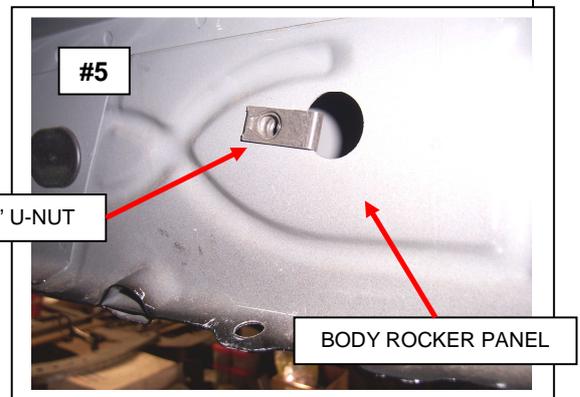

**Step-5** Attach each bracket to the rocker panel using (1) 5/16" x 1" hex bolt, (1) 5/16" lock washer, (1) 5/16" flat washer and to the pinch mold using (1) 3/8" x 1 1/4" hex bolt, (1) 3/8" lock washer, (1) 3/8" flat washer and (1) 3/8" hex nut. Leave the nut and bolts loose for final adjustment. **Photo #6 & #7**

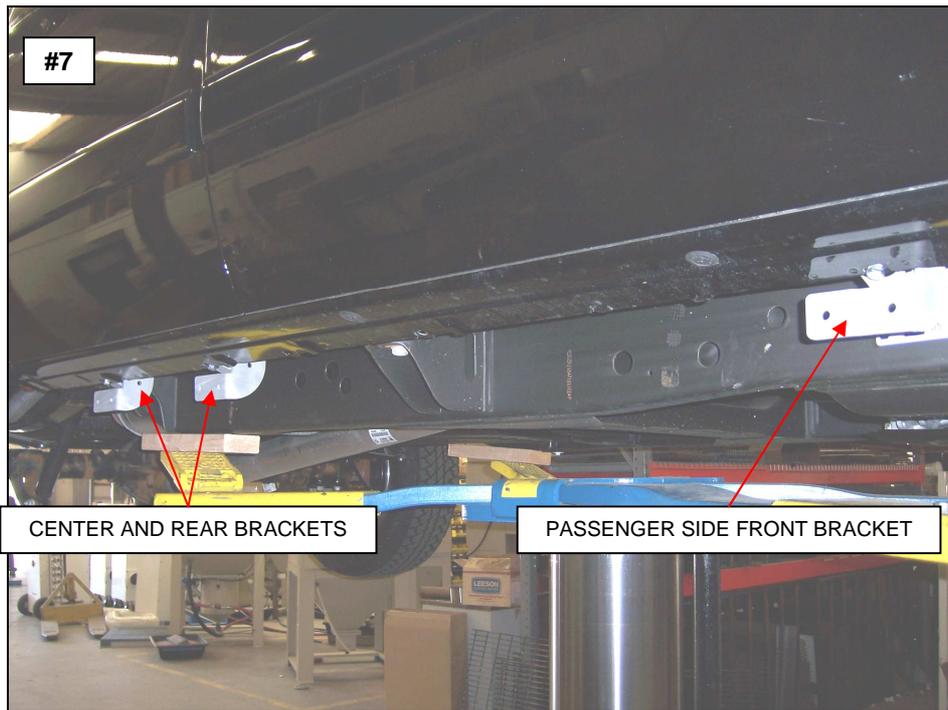

**Step-6** Attach the passenger side step to each bracket using (2) 3/8" x 1 1/4" hex bolts, (2) 3/8" flat washers, (2) 3/8" lock washers and (2) 3/8" hex nuts. **Photo #8**

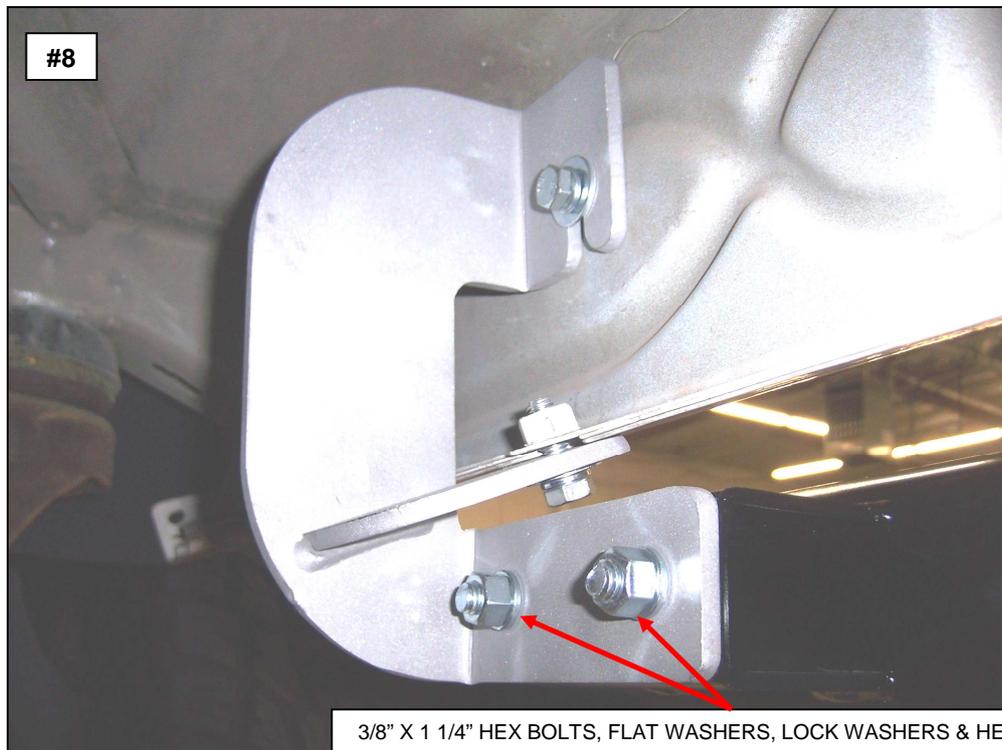

**Step-7** Align the side step with the vehicle and tighten all bracket and side step nuts and bolts. Repeat the above steps to install the driver side brackets and side step.

FODI7.003.I

**FOR TECHNICAL OR WARRANTY INFORMATION CALL:**  
**TOLL FREE (888)427-4466 FAX (714)672-0278**  
**GO RHINO! Products® 591 W. Apollo St. Brea, CA 92821**