



INSTALLATION INSTRUCTIONS

DOMINATOR III SERIES SIDE STEPS PART NUMBER D361461 (B)

DODGE RAM (1500 02-08), (2500, 3500 03-09) QUAD CAB P/U 4DR 2/4WD

Do not attempt to install this product on any vehicle other than the one it is designed for and listed above!

PARTS LIST

<u>QTY</u>	<u>PARTS DESCRIPTION</u>	<u>QTY</u>	<u>PARTS DESCRIPTION</u>
12	1/4" X 3/4" SELF TAPPING HEX BOLTS	12	3/8" X 2" HEX BOLTS
24	3/8" HEX NUTS	4	D02 FRONT AND REAR MOUNTING BRACKETS
24	3/8" LOCK WASHERS	2	D03 CENTER MOUNTING BRACKETS
48	3/8" FLAT WASHERS	1	D361461D DRIVER SIIDE STEP
12	3/8" X 1 1/4" HEX BOLTS	1	D361461P PASSENGER SIDE STEP

Read the instructions completely before you begin the installation.


If your vehicle is equipped with factory side steps, remove the side steps and fasteners.

This installation uses (3) mounting brackets per side, and requires drilling (2) holes in the lower body pinch mold for each bracket.

It is the installer's responsibility to confirm all measurements and that there are no obstructions such as brake, fuel or electrical lines before drilling.

STEP-1 Beginning with the passenger side measure reward from the front fender bolt (refer to diagram for dimensions) and scribe (6) vertical lines on the body pinch mold.



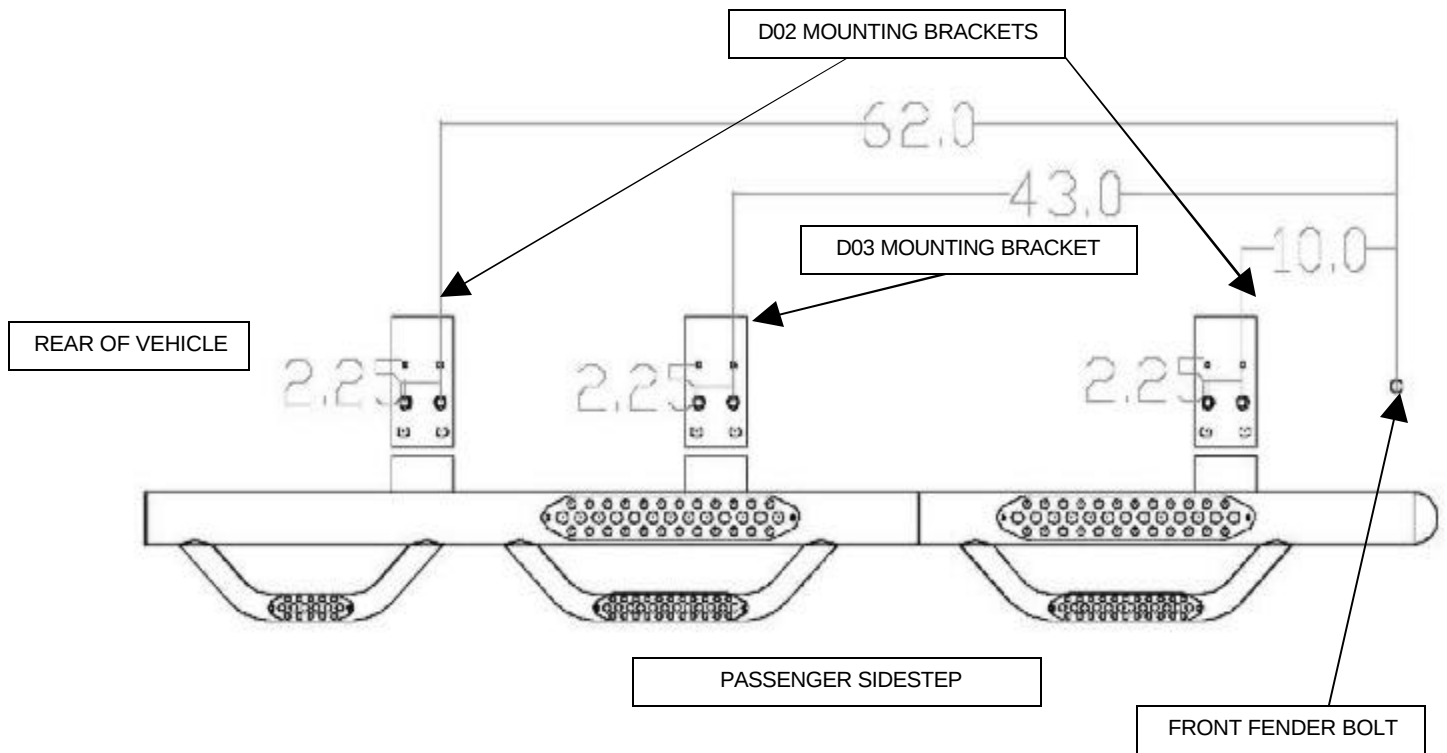

STEP-2 Measure up from the bottom edge of the pinch mold 7/16" and scribe intersecting lines.




STEP-3 Confirm the measurements, center punch and drill 3/8" holes through the body pinch mold. Repeat the above steps for the driver side.




STEP-4 Loosely attach the mounting brackets to the body pinch mold using the 3/8" x 2" hex bolts, flat washers, lock washers and hex nuts as shown.



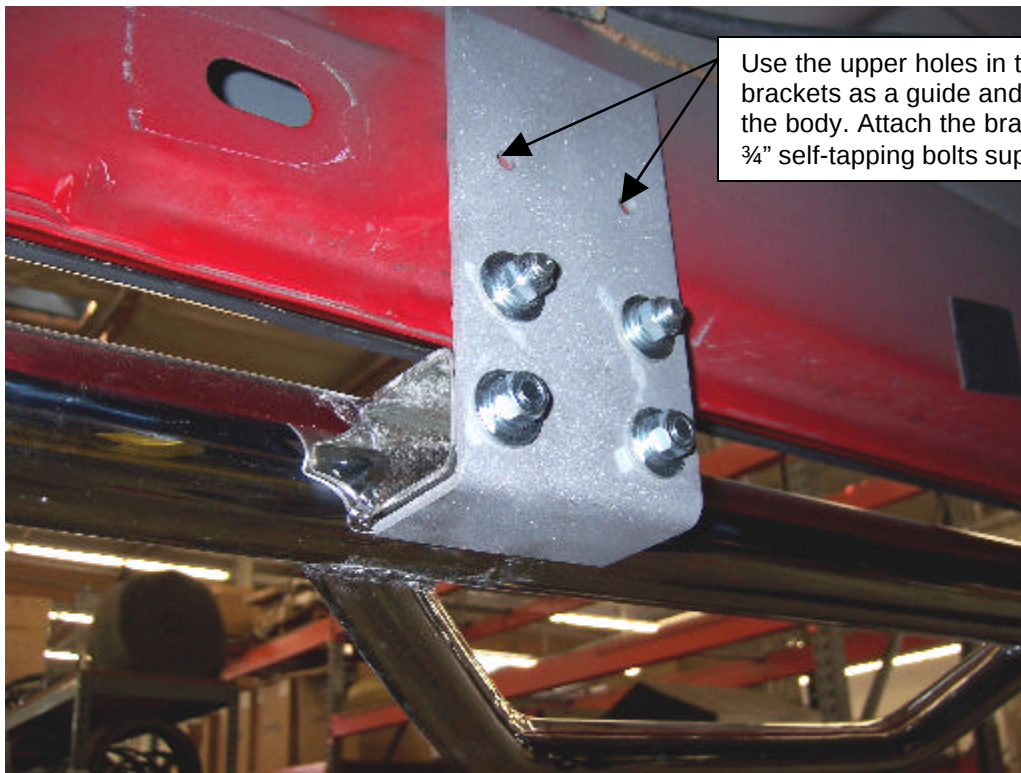

Use the upper holes in the mounting brackets as a guide and drill 3/16" holes in the body. Attach the bracket using the 1/4" x 3/4" self-tapping bolts supplied.

STEP-5 Position the passenger sidestep up to the mounting brackets and loosely attach it to the brackets using the 3/8" x 1 1/4" hex bolts, flat washers, lock washers and hex nuts.

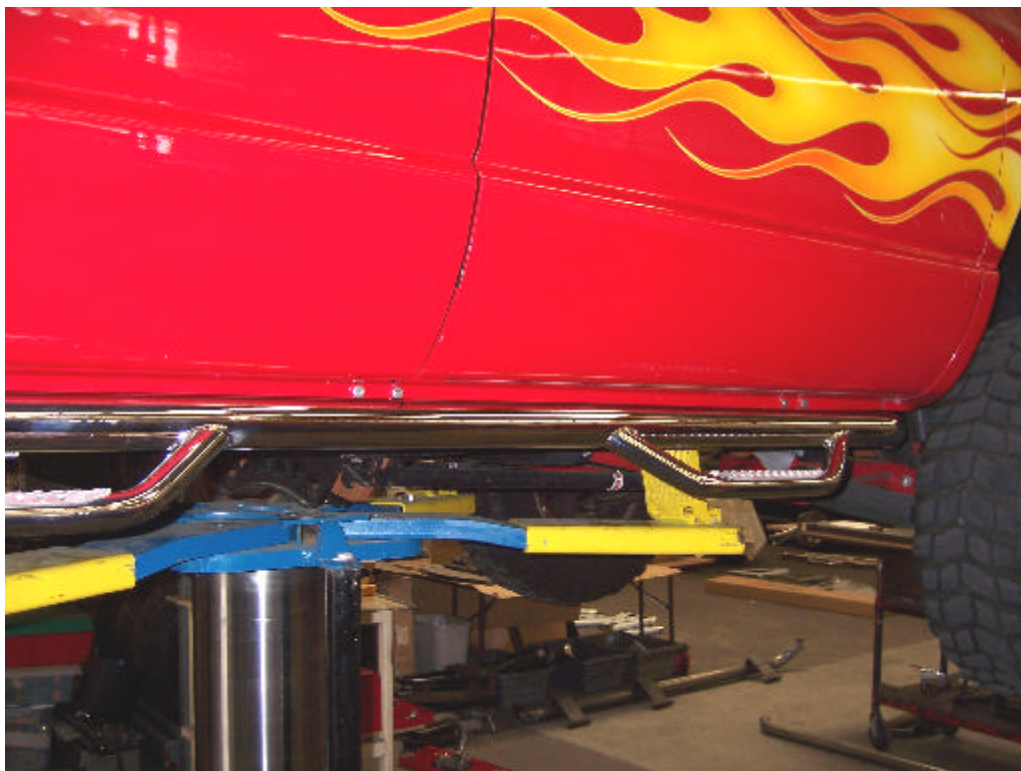

STEP-6 Align sidestep with the body and then tighten all mounting bracket and sidestep nuts and bolts.

STEP-7 Repeat the above steps to install the driver side mounting brackets and sidestep.

FOR TECHNICAL OR WARRANTY INFORMATION CALL:
TOLL FREE (888)427-4466 FAX (714)672-0278
GO RHINO! Products® 591 W. Apollo St. Brea, CA 92821