

# INSTALLATION INSTRUCTIONS

DOMINATOR D3 SIDE STEPS  
FORD F-250, F-350 SUPER DUTY CREW CAB PICKUP 6.5' BED  
PART # D36262 (B-T-PS)




## PARTS LIST

<u>QTY</u>	<u>PARTS DESCRIPTION</u>	<u>QTY</u>	<u>PARTS DESCRIPTION</u>
12	5/16" X 1" HEX BOLTS	48	3/8" FLAT WASHERS
12	5/16" FLAT WASHERS	24	3/8" HEX NUTS
12	5/16" LOCK WASHERS	6	F99 MOUNTING BRACKETS
12	5/16" U-NUTS	1	362FP FRONT PASSENGER SIDESTEP SECTION
24	3/8" LOCK WASHERS	1	362RP REAR PASSENGER SIDESTEP SECTION
24	3/8" x 1 1/4" HEX BOLTS	1	362FD FRONT DRIVER SIDESTEP SECTION
		1	362RD REAR DRIVER SIDESTEP SECTION


Read the assembly and installation instructions completely and verify that all of the parts listed are accounted for. If you have defective, missing or damaged parts or need assistance, please contact Go Rhino Products for fast, friendly customer service at: 1-888-427-4466 or email: [warranty@gorhino.com](mailto:warranty@gorhino.com)

## Side Step Assembly

**Step-1** Lay out the front and rear side step sections on a protective surface with the step pads down and install the plastic trim ring (lip over the edge) of the rear section.

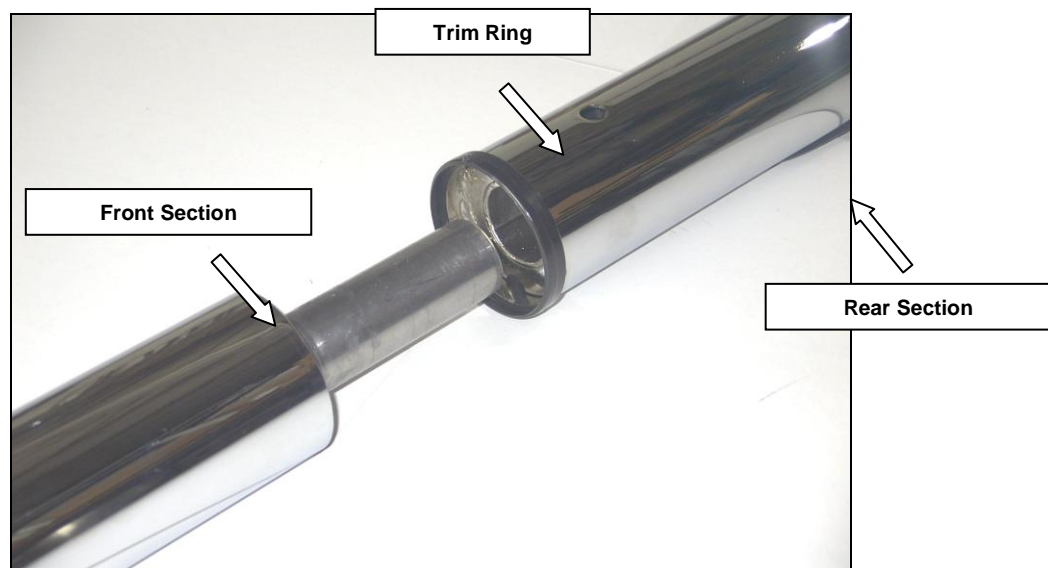


**Step-2** Insert the male end of the side step front section into the female end of the side step rear section, and position the front side step section snug against the trim ring (lip over the edge). Align the front and rear side step sections, and secure the assembly using (1) 3/8" Allen head set screw.

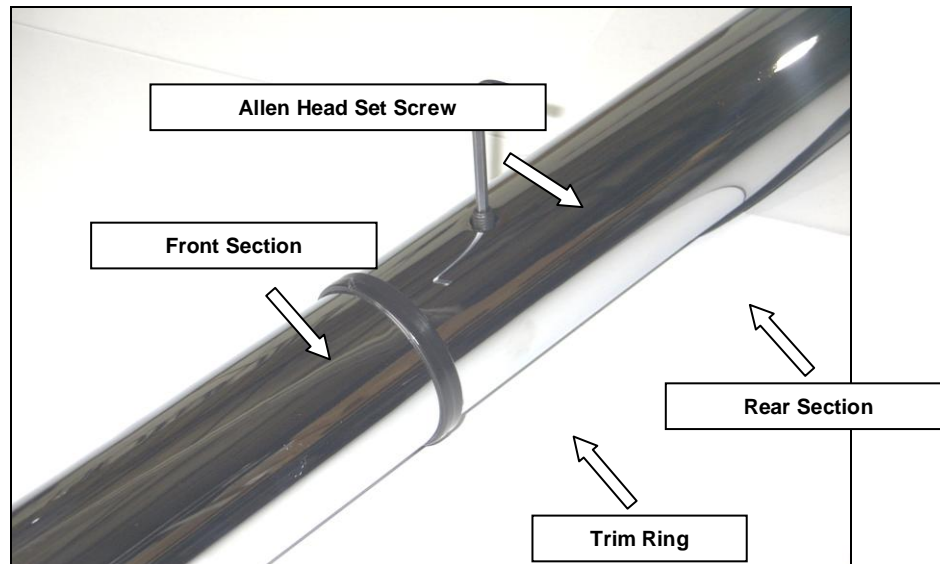


**Step-3** Install the plastic plug in the set screw access hole to conceal the set screw.


**Step-4** If the vehicle is equipped with factory side steps, remove the fasteners and steps.

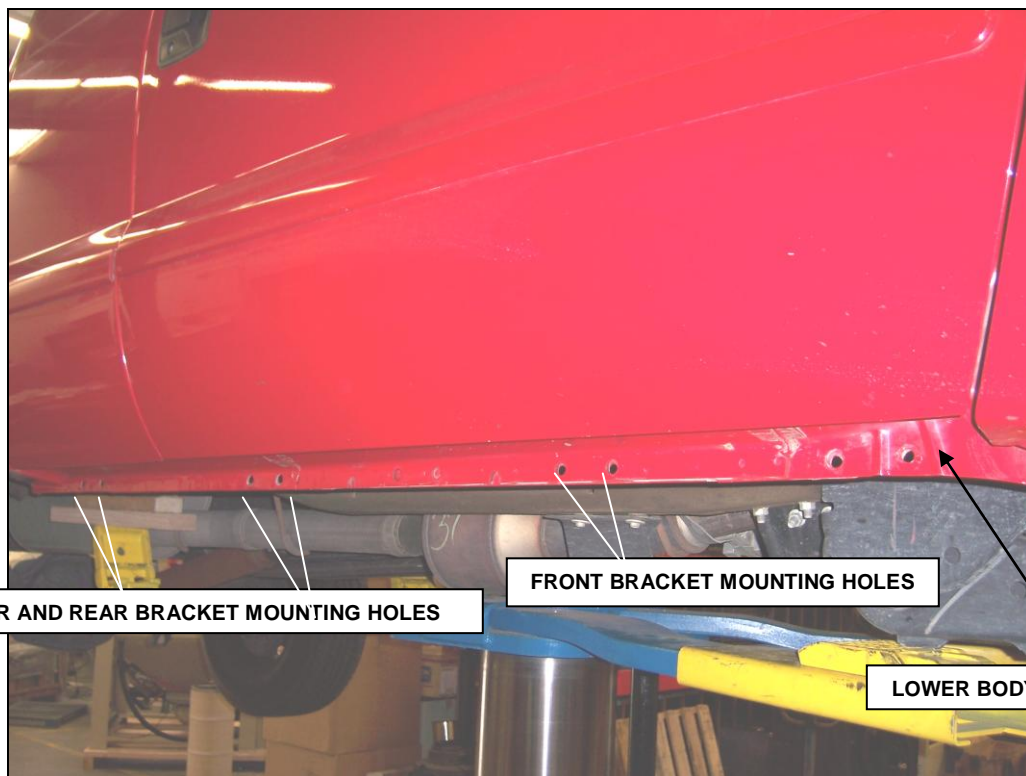


**Step-5** This installation uses three mounting brackets per side. Beginning with the passenger side, locate the holes in the rocker panel and lower body pinch mold.

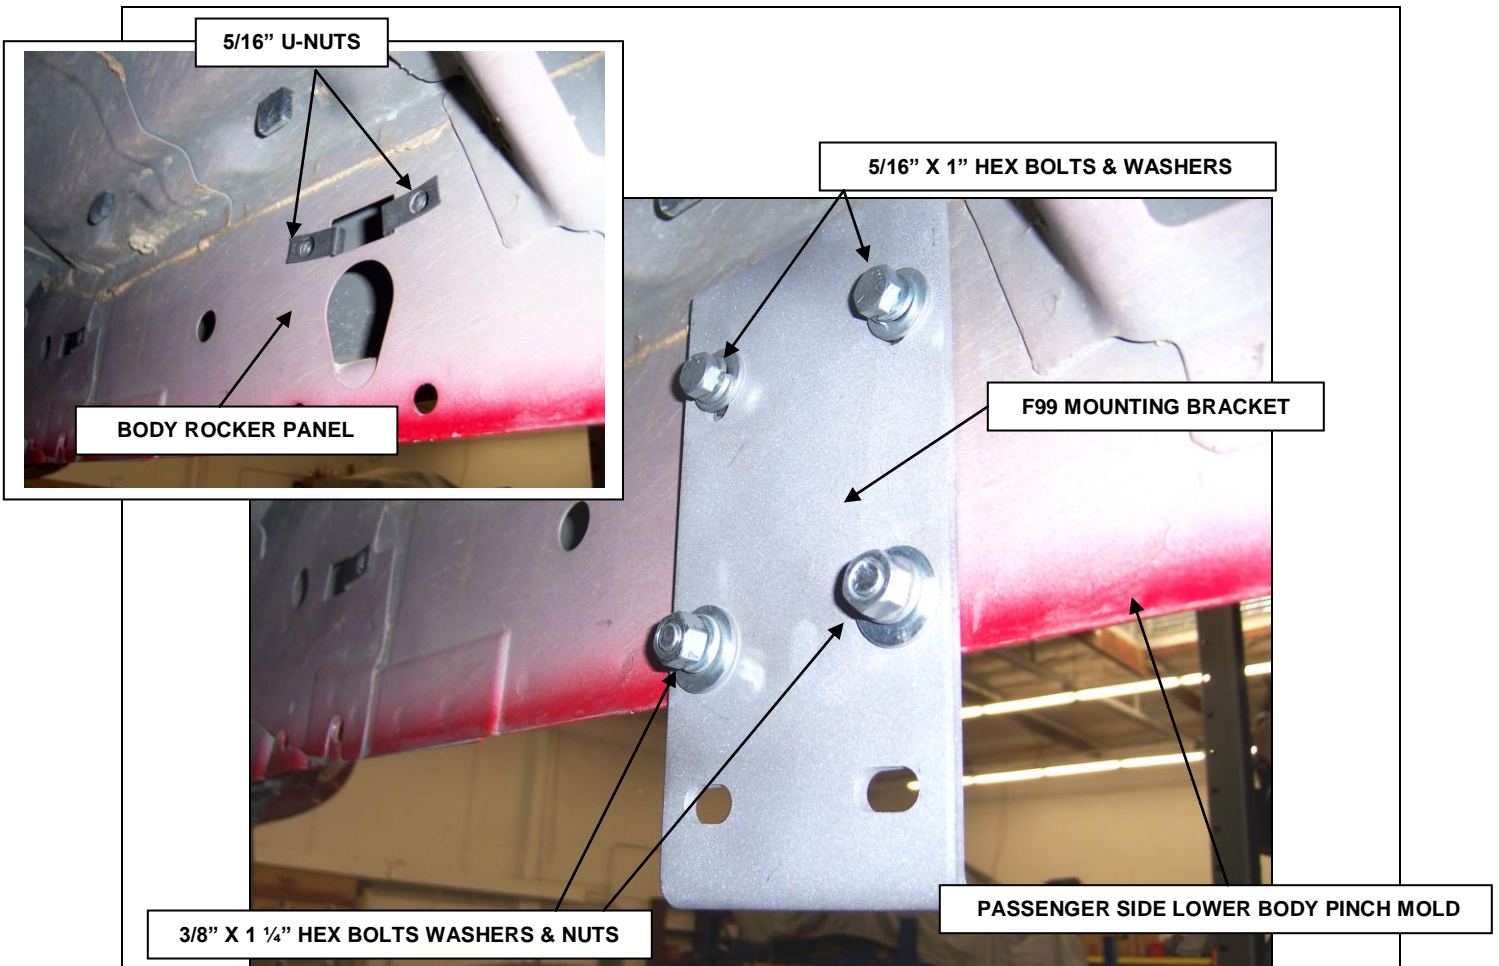

**Step-6** Install the 5/16" u-nuts in the rocker panel. Loosely attach the mounting brackets to the rocker panel and pinch mold using the 5/16" hex bolts, 3/8" hex bolts, washers, and nuts as shown.

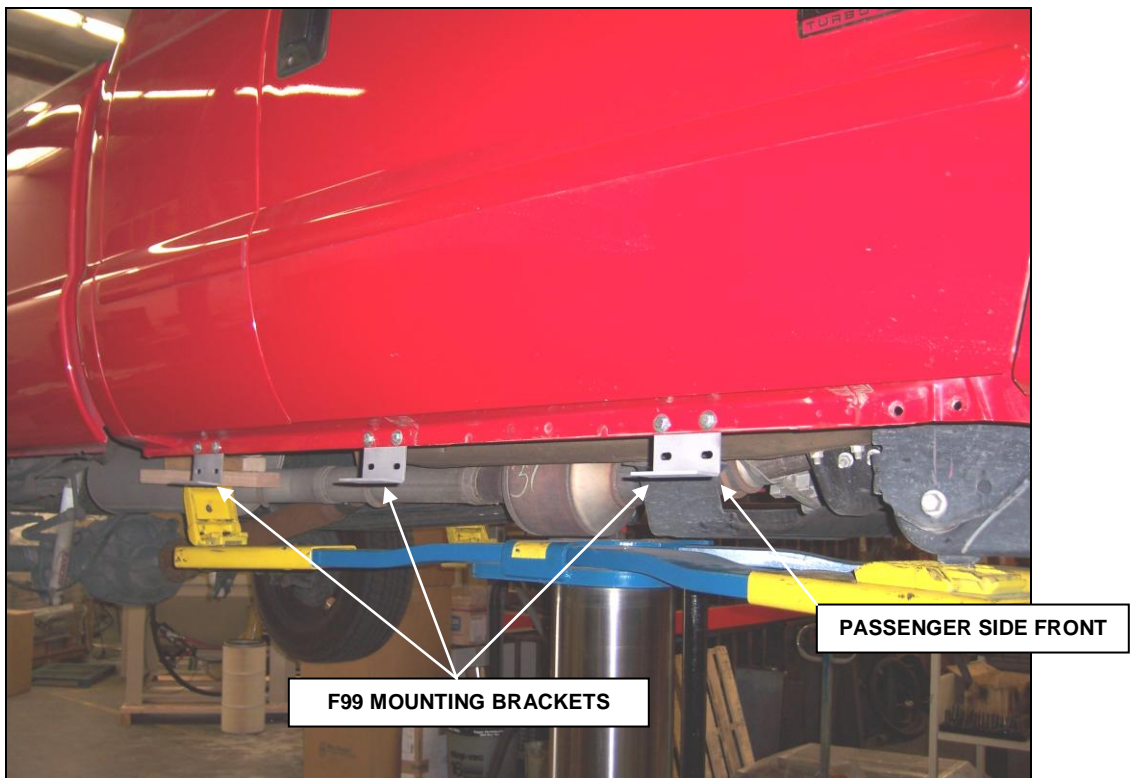



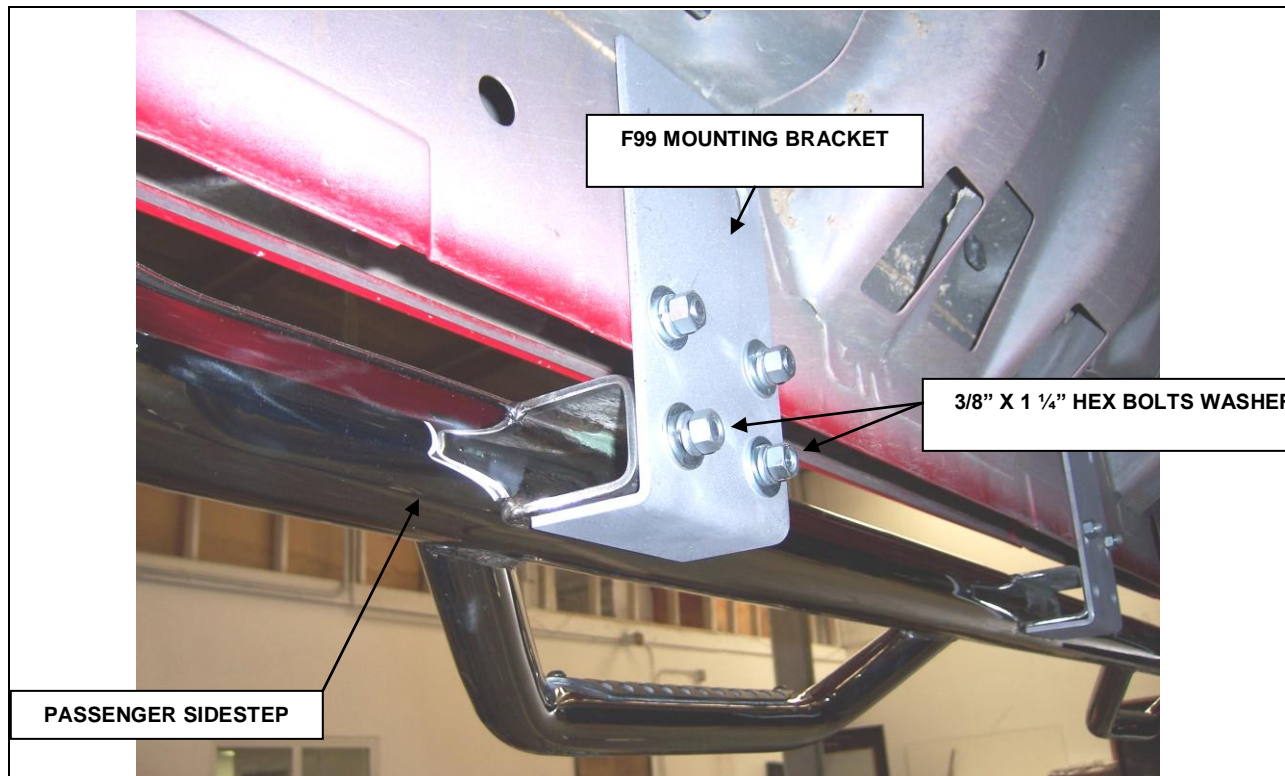

**Step-7** Position the passenger sidestep up to the mounting brackets and loosely attach it to the brackets using the 3/8" x 1 1/4" hex bolts, washers and nuts as shown.



**Step-8** Align sidestep with the body, and then tighten all mounting bracket and sidestep nuts and bolts. Repeat the above steps to install the driver side mounting brackets and sidestep.