

# **INSTALLATION INSTRUCTIONS** **37254 - 37256 ( 1-2-3-4 ) SIDE BAR** **2005 FRONTIER KING CAB. / CREW CAB. (USA)**

## **Parts List:**

### **QTY**

P01 (1) Side bar set  
 Driver & Passenger  
 P02 (3) Main mounting brackets set  
 Driver & Passenger

(1) Hardware kit including:

T01 (12) M8 Hex nut  
 T02 (12) 5/16" Flat washer  
 T03 (12) 5/16" Lock washer  
 T04 (12) 3/8 x 1 1/4" Hex. Head bolt  
 T05 (12) 3/8" Flat washer  
 T06 (12) 3/8" Lock washer

## **Tools required:**

Socket & Wrench 13 mm

Ratchet

Socket & Wrench 9/16"

Extension to ratchet

## **Instructions:**

**Aproximated installation time: 30 min.**

1. Read and understand instructions completely before beginning installation.
2. Identify the correct side before installing, the track but near the fold of the Side bar it is towards atras of vehicle.
3. Identify below in the rocker panel, in the sides, spiral per us to the front, center and rear of vehicle.
4. Install brackets on spiral per us to the front, center and atras of vehiculo and attach with ( 2 ) nuts M8, ( 2 ) flat and lock washer 5/16". Leave loose.
5. It mounts the Side bar on brackets and attach with ( 2 ) 3/8 x 1 1/4" hex head bolt, ( 2 ) flat and lock washer ,by each bracket. Leave loose.
6. Make any final alignment to the side bar and tighten all bolts.
7. Remember to check and re-tighten all bolts periodically.

## **Assembly Diagram:**


### **ILLUSTRATION**

ATTACH THE SIDE BAR TO EACH BRACKET  
 WITH:

(2) 3/8 x 1 1/4" HEX HEAD BOLT  
 (2) 3/8" FLAT AND LOCK WASHER

ATTACH EACH BRACKET TO THE SPIRAL PER  
 US OF THE VEHICLE WITH:

(2) M8 NUTS  
 (2) 5/16" FLAT AND LOCK WASHER

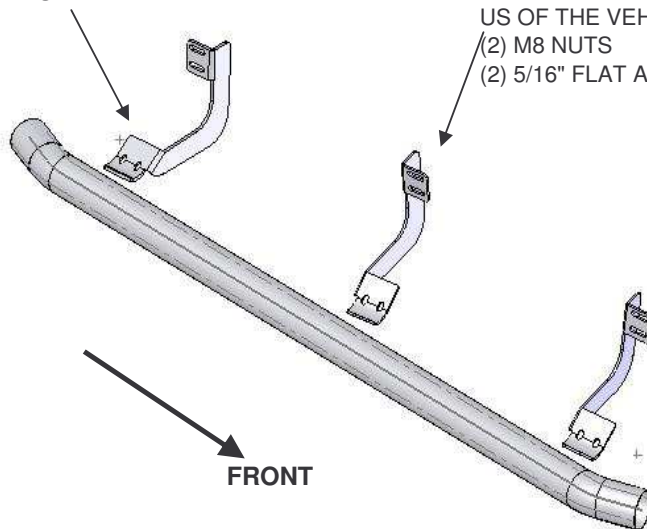

THE ILLUSTRATION SHOWS THE PASSENGER SIDE.

## **Cleaning and care instructions:**

Diseño:

Calidad:

Protect the finish with a non-abrasive automotive wax, (e.g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.