

INSTALLATION INSTRUCTIONS

37059

2004 Nissan Titan Crew Cab - Short Bed

Parts List :

QTY

(1) Sidebar set (Left & Right)	(1) Hardware kit including:
(2) Front mounting bracket (left & right)	(4) 1/2 x 2" Hex head bolt
(2) Rear mounting bracket (left & right)	(2) 3/8 x 1 1/2" Carriage bolt
(2) Auxiliary mounting bracket (left & right)	(4) 1/2" special bolt
	(8) 1/2" Flat washer
	(8) 1/2" Lock washer
	(4) 1/2" Hex nut
	(2) 3/8" Flat washer
	(2) 3/8" Lock washer

Tools Required :

3/4" Socket	Ratchet
3/4" Wrench	14mm Socket


Instructions :

Approximated installation time:


1. Read and understand instructions completely before beginning installation.
2. Sidebar set consist of a driver and passenger side. The rear leg is the 90° bent leg. Be sure to determinate the correct side before installation.
3. Locate front body mount and remove existing bolts to secure front mounting bracket. Picture 1.
4. To install auxiliary mounting bracket, locate existing hole in the frame then insert a 3/8 x 1 1/2" carriage bolt and secure auxiliary mounting bracket with 3/8" flat & lock washers and hex nut. Picture 2.
5. To install rear mounting bracket, locate existing holes in the frame, they are close to the rear body mount, then insert the 1/2" special bolt by the holes and secure rear mounting bracket using 1/2" flat & lock washers and hex nuts. Leave loose. Picture 3.
6. Place the sidebar up to the mounting brackets and bolt to the front mounting bracket and auxiliary mounting bracket using a 1/2 x 2" hex head bolt, flat and lock washer. Bolt to the rear mounting bracket using 1/2 x 2" hex head bolt with corresponding washers. Leave loose.
7. Make any final adjustments to the alignment of the sidebar and tighten all bolts. Repeat for the opposite side.
8. You may need to re-tighten the bolts periodically.

Assembly Diagram :

Picture 1

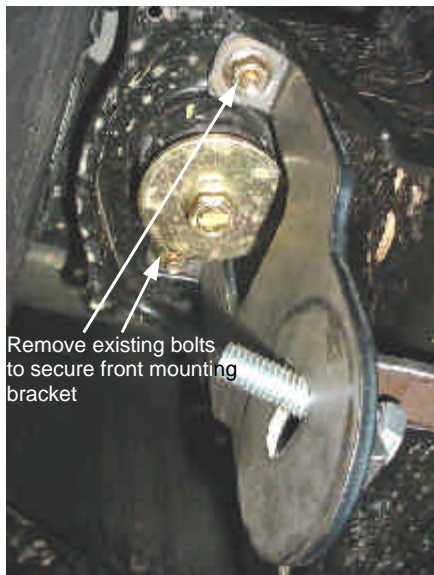

Picture 2

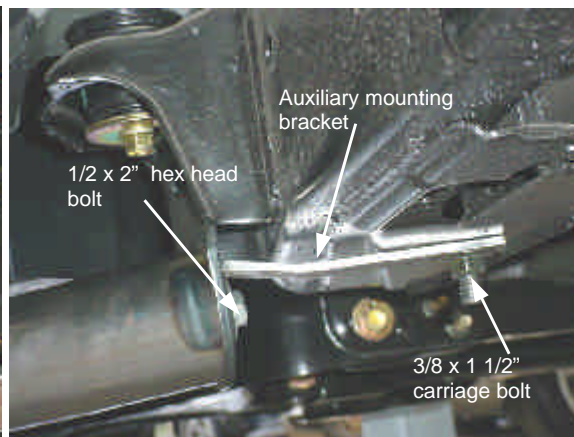

Picture 3

