


Parts List				
Item	Qty.	Code	Description	Max. Torque
1	1 Set	5212890AA	Main Bracket	-
1		KTE-52289	HARDWARE KIT INCLUDES:	-
2	2 Pc	-	1/2 x 2" Hex Head Bolt	65 ft. lbs.
3	2 Pc	-	1/2" Flat Washer	-
4	2 Pc	-	1/2" Lock Washer	-

Required Tools (Not included)	
Qty.	Description
1	17mm & 3/4" Wrench
1	17mm & 3/4" Socket & Wrench
1	Ratchet
1	Ratchet Extension

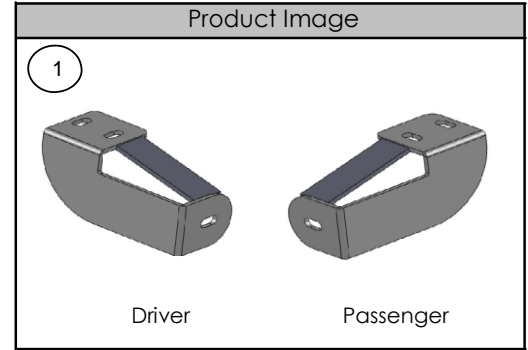

Instructions

1. Before beginning the installation, please read all directions carefully and verify that all necessary hardware is accounted for. If any parts are missing, stop the installation and contact your distributor immediately.
2. To maintain and care this product, keep it clean and do not use abrasive cleaners or polish waxes. We recommend using only automotive wax such as pure carnauba to avoid scratches and rust.
3. The approximate installation time is 25 min.
4. Locate the factory tow hooks in front of the vehicle's frame and remove them.
5. Insert the bracket and the tow hook back into the original location. Re-attach using the original bolts and repeat on the opposite side. Leave loose. See Pictures 1 and 2.

PICTURE 1



Tow Hook

PICTURE 2



Bracket and tow hook. Passenger side.

6. Install your Dakar / Rhino Charger / Bunker over the main brackets with (1) 1/2 x2" hex head bolts, (1) 1/2" flat washers and (1) 1/2" lock washer to each side. Leave loose. SEE ILLUSTRATION 1.

7. Make any adjustments to the alignment of the Dakar / Rhino Charger / Bunker and tighten all bolts.
8. Remember to re-tighten the bolts periodically.

PICTURE 3. DRIVER SIDE.



ILLUSTRATION 1

